

# Telstra Smart Modem Gen 2 DJA0231

## Disclaimer



## Table of Contents

1. [Lights](#)
2. [Modem Connections and Buttons](#)
3. [Login and Home Screen](#)
4. [Change Modem's Login Password](#)
5. [Telstra's Internet User Name and Password](#)
6. [Parental Control](#)
7. [Connecting Wi-Fi devices](#)
8. [Address Reservation \(Static LAN IP Address\)](#)
9. [Port Forwarding](#)
10. [Inbuilt Help](#)
11. [Firewall](#)
12. [Reset Modem or Reboot Modem](#)
13. [Turn WI-FI OFF or ON](#)
14. [Bridge Mode](#)
15. [Dynamic DNS](#)
16. [Register and De-register a DECT handset](#)
17. [Telephony \(Information and Call Log\)](#)
18. [Remote WEB Access](#)
19. [Wi-Fi MAC Filtering](#)
20. [Management \(Add extra Modem Logins\)](#)
21. [Change Wi-Fi Channel SSID and Password](#)
22. [Third Party VDSL Modem /Router](#)
23. [DLNA Server and Mass Storage](#)
24. [Traffic Monitor](#)
25. [4G Cellular Backup](#)
26. [Diagnostics \(Fault Finding\)](#)
27. [Change IP LAN Address of Modem](#)
28. [Modem Firmware / Software](#)
29. [Modem's Time Settings](#)
30. [Connecting USB Printer](#)
31. [WiFi Tools](#)
32. [DNS Selection](#)
33. [Telstra Gen 2 WiFi Booster](#)
34. [Modem as a Access point](#)
35. [Enable Guest WiFi](#)
36. [WiFi Protected Management Frames \(WiFi-PMF\)](#)
37. [Specifications](#)
38. [Known Limitations and Bugs](#)

Note: The IP address of the Modem has been changed in this guide to 192.168.178.1


---

# 1. Lights

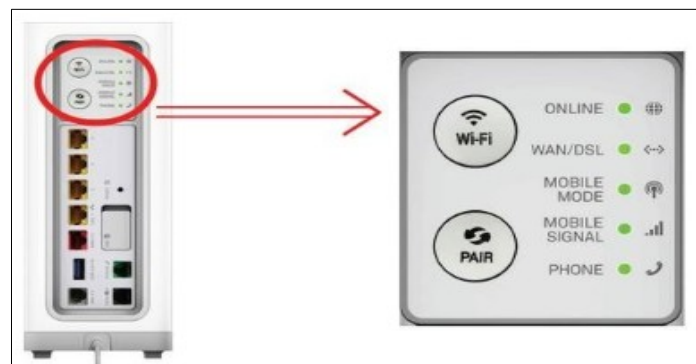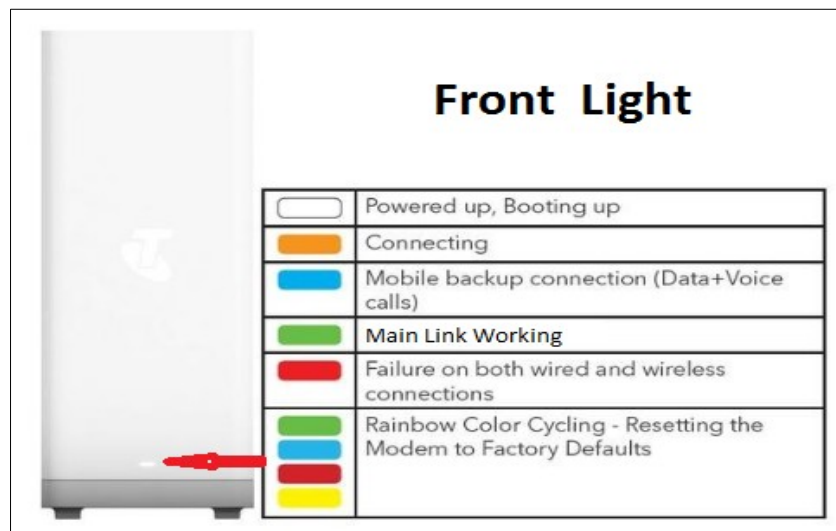

|                         |  |                                                                                                                                                                          |
|-------------------------|--|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Online LED  (Broadband) |  | Physical WAN port connected successfully or Mobile Broadband is active. Authentication of username and password is successful and a public IP address has been assigned. |
|                         |  | Authentication of username and password in progress                                                                                                                      |
|                         |  | Physical WAN port is connected but authentication of username and password was unsuccessful.                                                                             |
|                         |  | Physical WAN port is not connected or Mobile Broadband not active.                                                                                                       |
| WAN LED                 |  | WAN port is connected successfully to DSL or NBN                                                                                                                         |
|                         |  | Initializing WAN-DSL interface                                                                                                                                           |
|                         |  | In progress, WAN-DSL interface connecting                                                                                                                                |
|                         |  | Physical WAN port is not connected.                                                                                                                                      |
| Mobile Mode             |  | Main link Faulty Modem on 4G Backup                                                                                                                                      |
|                         |  | 4G Backup not in use                                                                                                                                                     |
| Mobile Signal           |  | Great signal strength<br>Note: More lighted LEDs indicates stronger signal.                                                                                              |
|                         |  | Good signal strength                                                                                                                                                     |
|                         |  | Limited access - Please move the Modem for stronger signal strength on mobile backup connection.                                                                         |
| Phone Led               |  | SIP not registered or PSTN port not connected                                                                                                                            |
|                         |  | SIP registered or voltage detected on PSTN                                                                                                                               |
|                         |  | Phone Ringing or incoming or outgoing call                                                                                                                               |
|                         |  | SOS calls only                                                                                                                                                           |
|                         |  | Fault                                                                                                                                                                    |

## 2. Modem Connections and Buttons

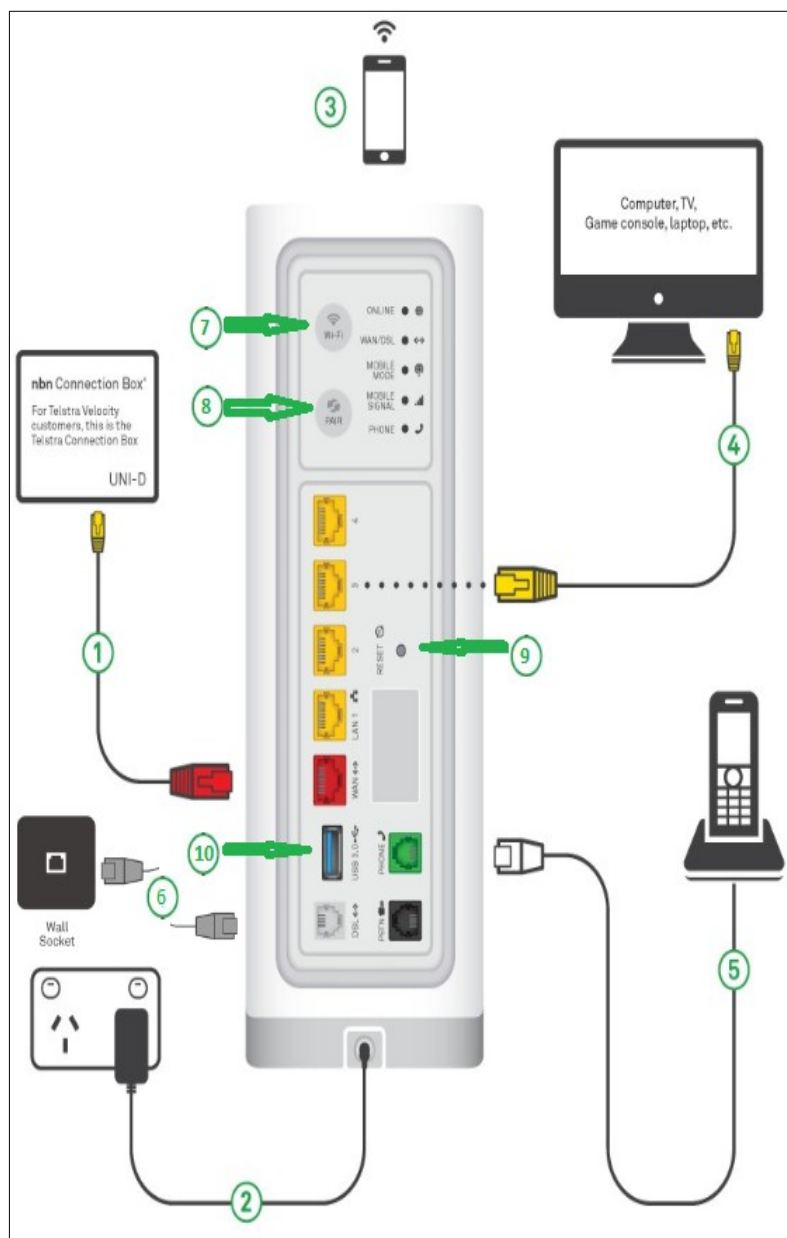

1. Gigabit WAN port for connection to NBN connection Box (FTTP FTTC and Fixed Wireless) NBN Cable Modem (NBN HFC), Cable Adaptor (Telstra Cable) or Optical terminating equipment (Telstra Velocity).
2. Power
3. Devices connected to Moem by Wi-Fi. (Default SSID and Wi-Fi password located on label base of Modem)
4. Four Gigabit LAN port for connecting devices with Ethernet ports
5. RJ12 phone port for normal phones. Maximum load 3 REN
6. DSL Port connected directly to phone socket for FTTN. and FTTB connections and to phone socket via ADSL Filter / Splitter for ADSL connections
7. Wi-Fi On Off Button  
Off: All Wi-Fi Bands turned off.  
**Green:** At least one Wi-Fi Band is turned on.  
Press fTo toggle all Wi-Fi Bands Off.  
Press again to turn all Wi-Fi Bands On.

### 8. Pair Button

Off: No DECT handset paired to Modem.

**Green:** DECT handset registered to modem or WPS device successfully paired to modem in last 15 minutes.

**Green Flashing twice per second:** Ready to pair with handset or WiFi device

**Red Blinking:** Registration unsuccessful

**Green Flashing once per two seconds:** Paging paired handsets

To pair a handset or connect to a WPS enabled Wi-Fi device press for 5 seconds. The light will **Flashing Green twice per second** for 2 minutes. During this time the modem can be paired with a handset or connect to a WPS enabled Wi-Fi device.

To page paired handset press for less than two seconds.

### 9. Reset Button


Use a paper clip and press for 10 seconds to reset Modem

### 10. USB 3.0 Port for connecting USB flash drives and external hard drives the files of which can be accessed by devices connected to modem's LAN using DLNA or SMB


### 3. Login and Home Screen

Open a Web browser and type [192.168.0.1](http://192.168.0.1) into the address bar and press enter.

The The modem Login screen loads in the Web browser..

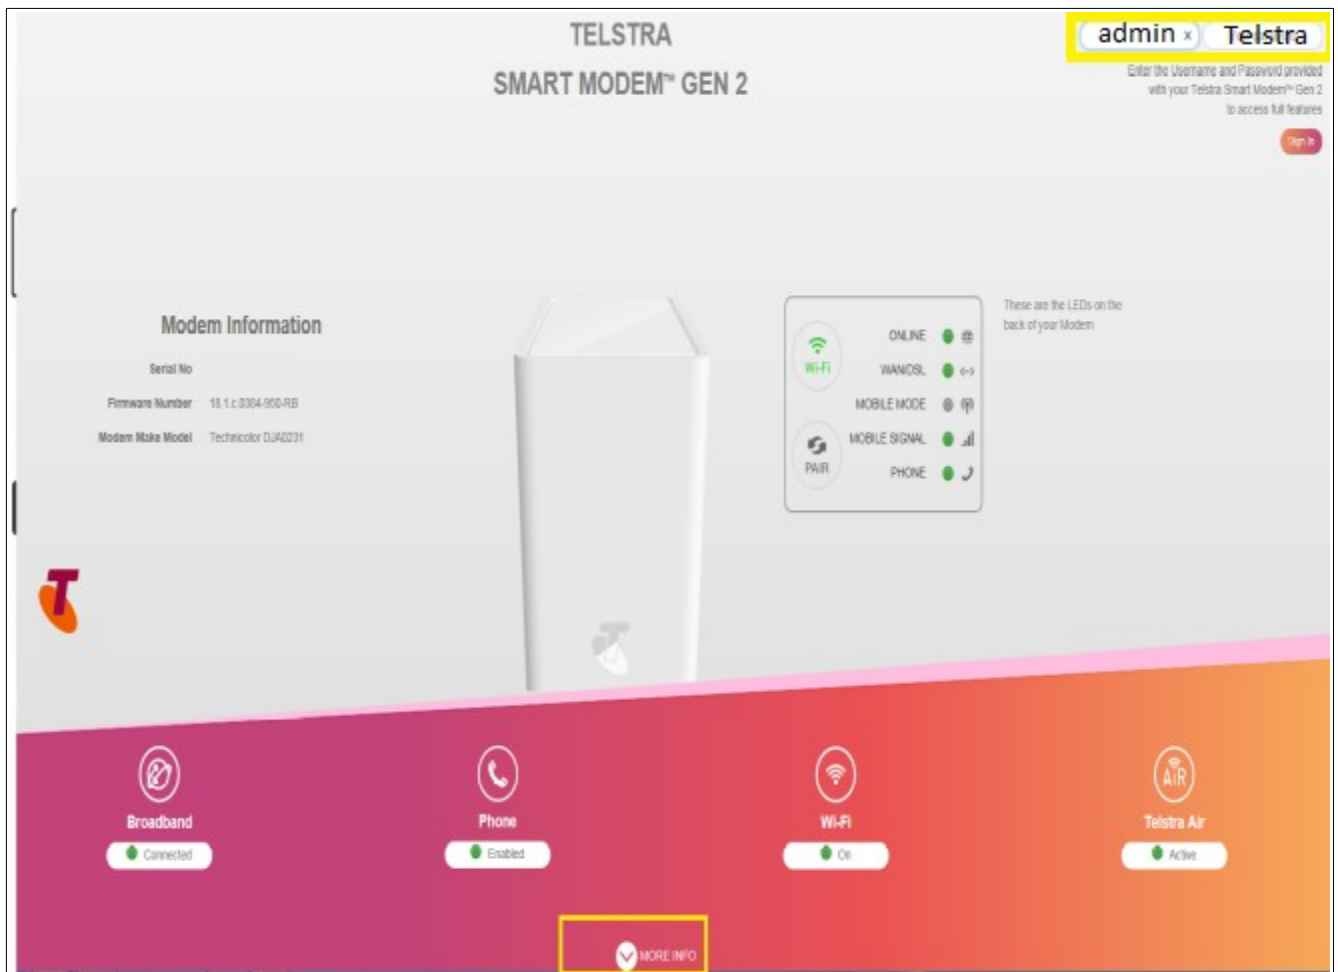



To view more information select the more info link bottom centre of page

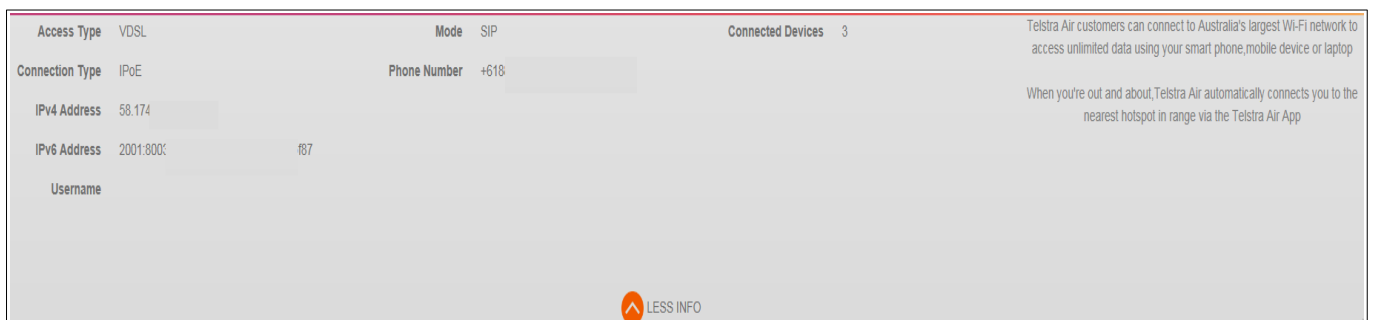


The default password is "Telstra" but on new models, it could be the serial number as well.

Enter password and select sign in.


The modems Basic Home page will open in your browser.

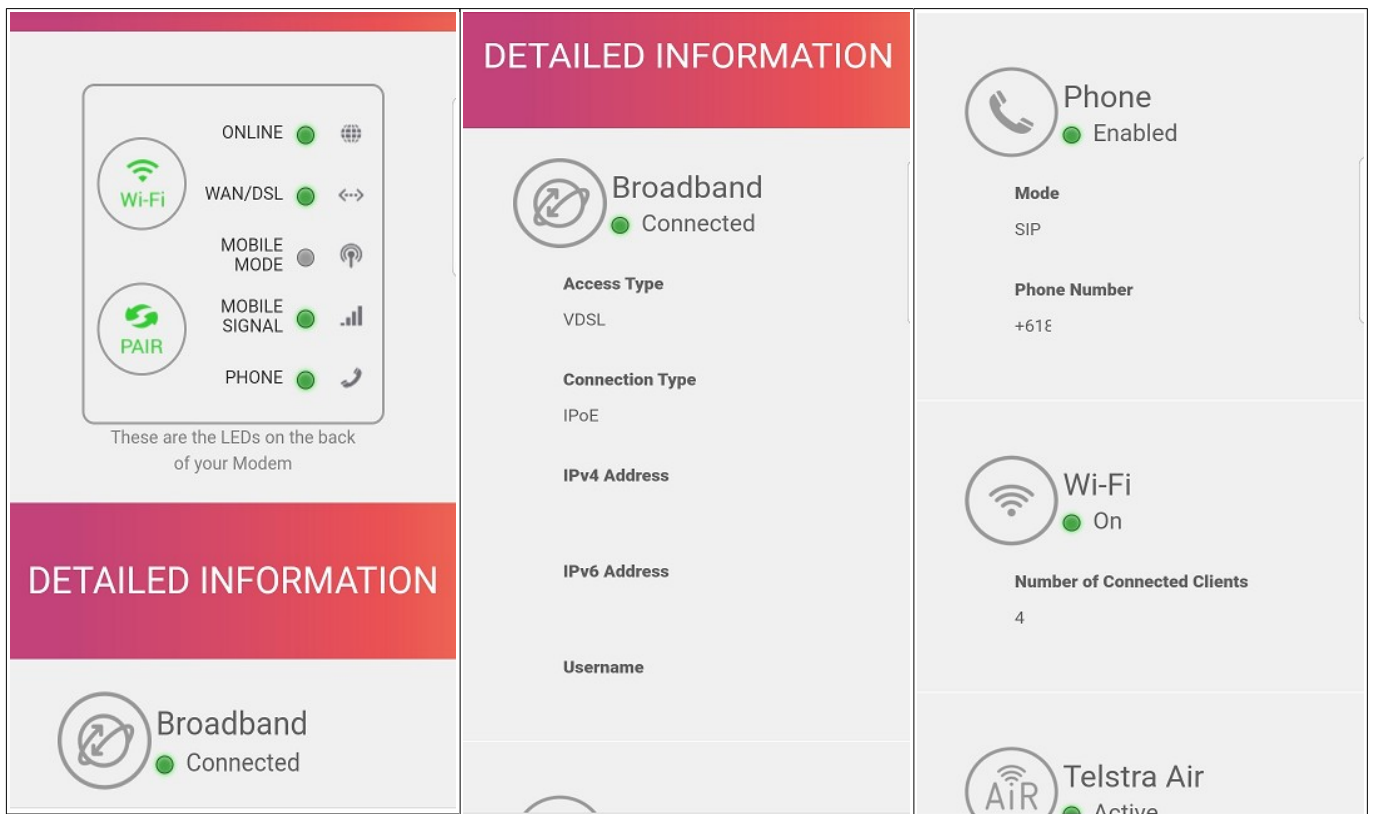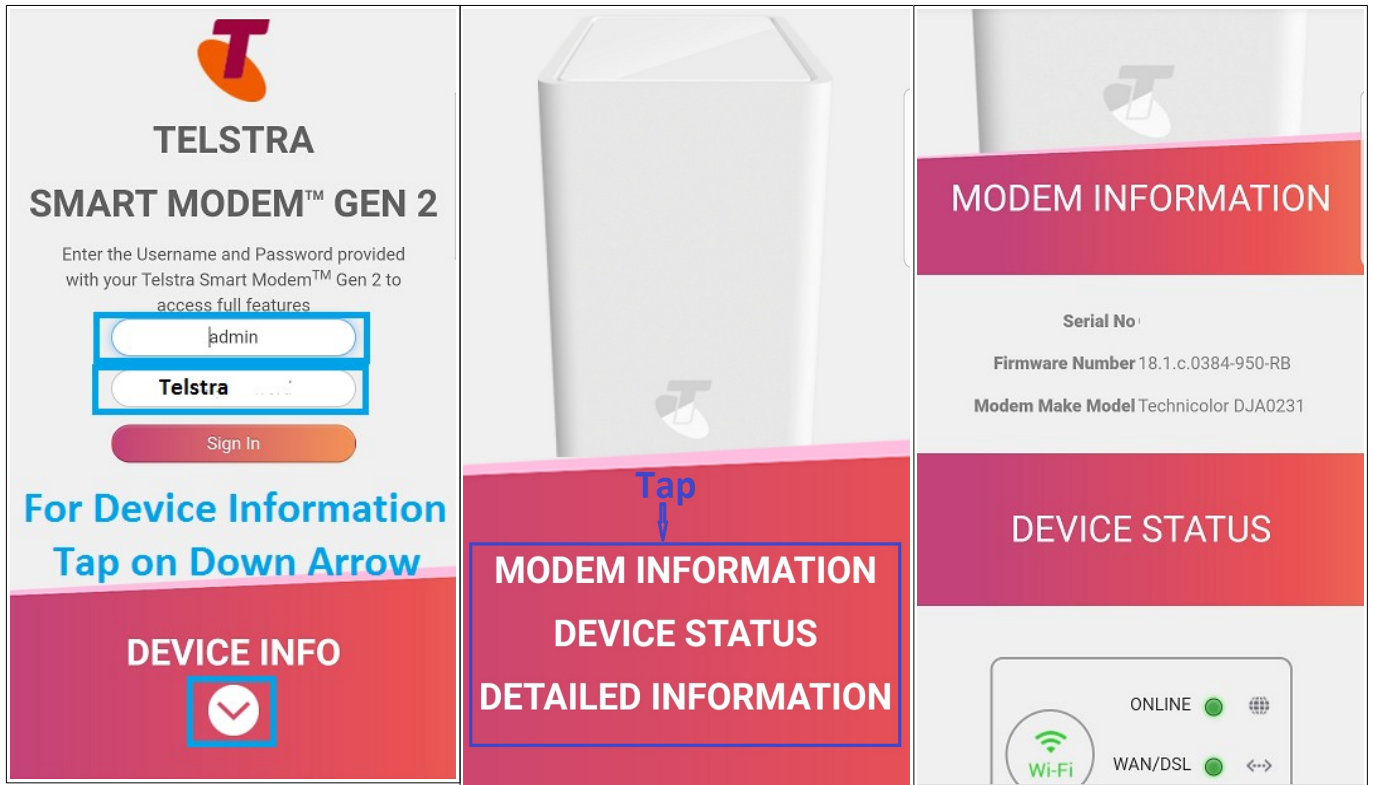

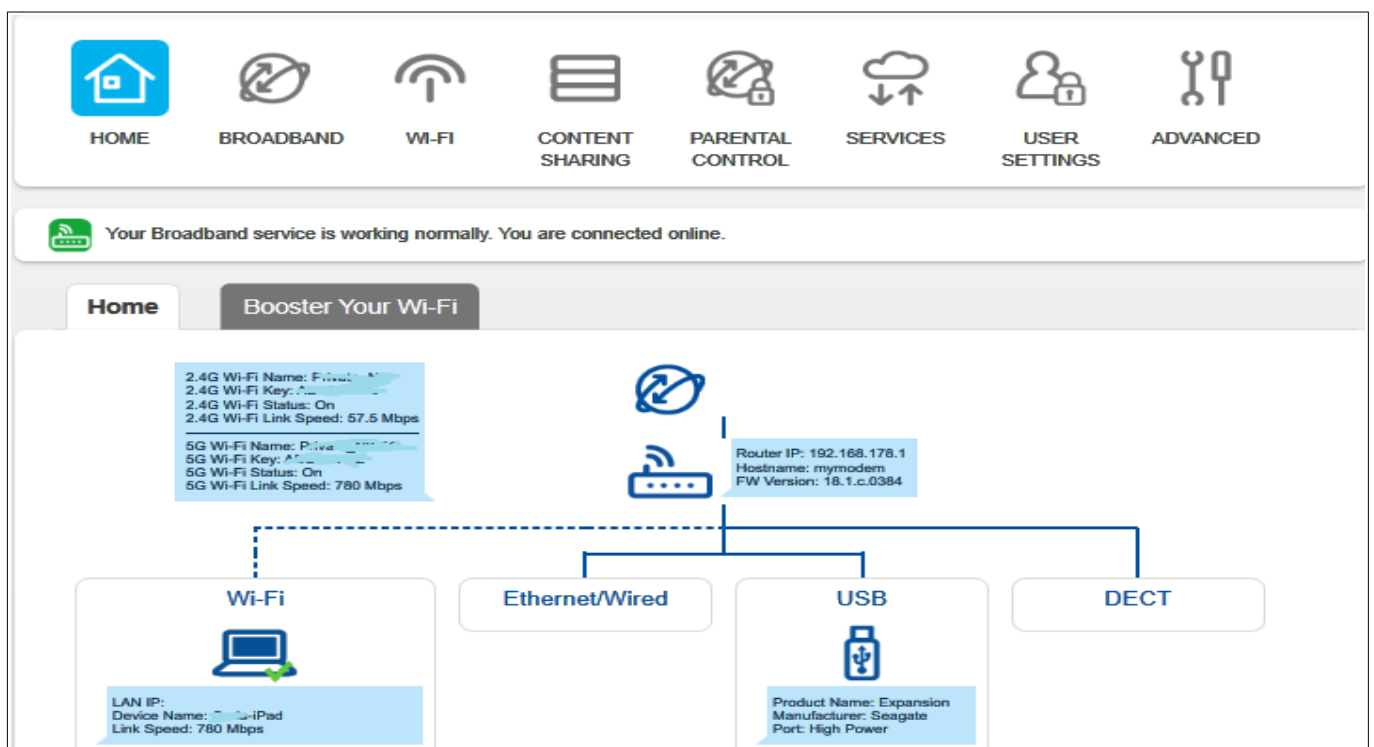


Hovering over the modem or link with the mouse pointer will display more information about the modem or link.

To learn more or change some settings on a device connected to WiFi or LAN click on the device.

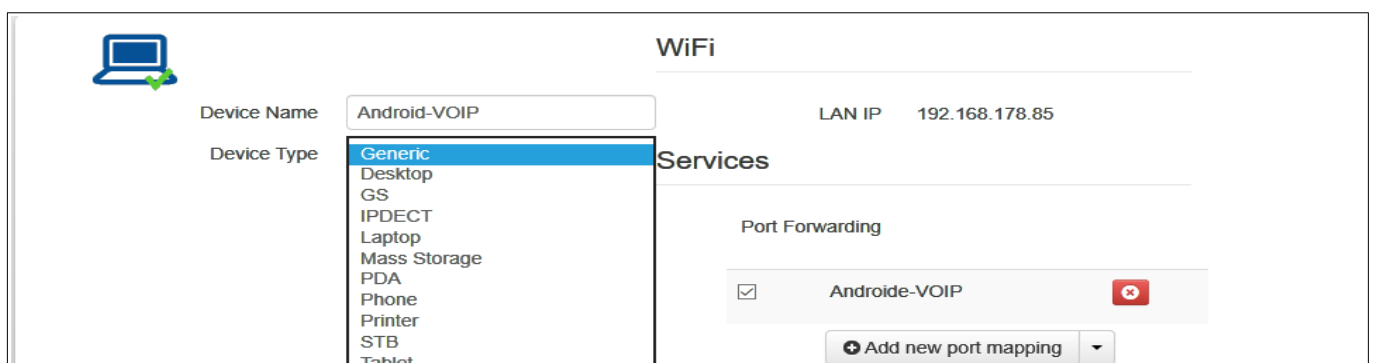

Clicking on “Advanced” top right displays the Advanced Home page

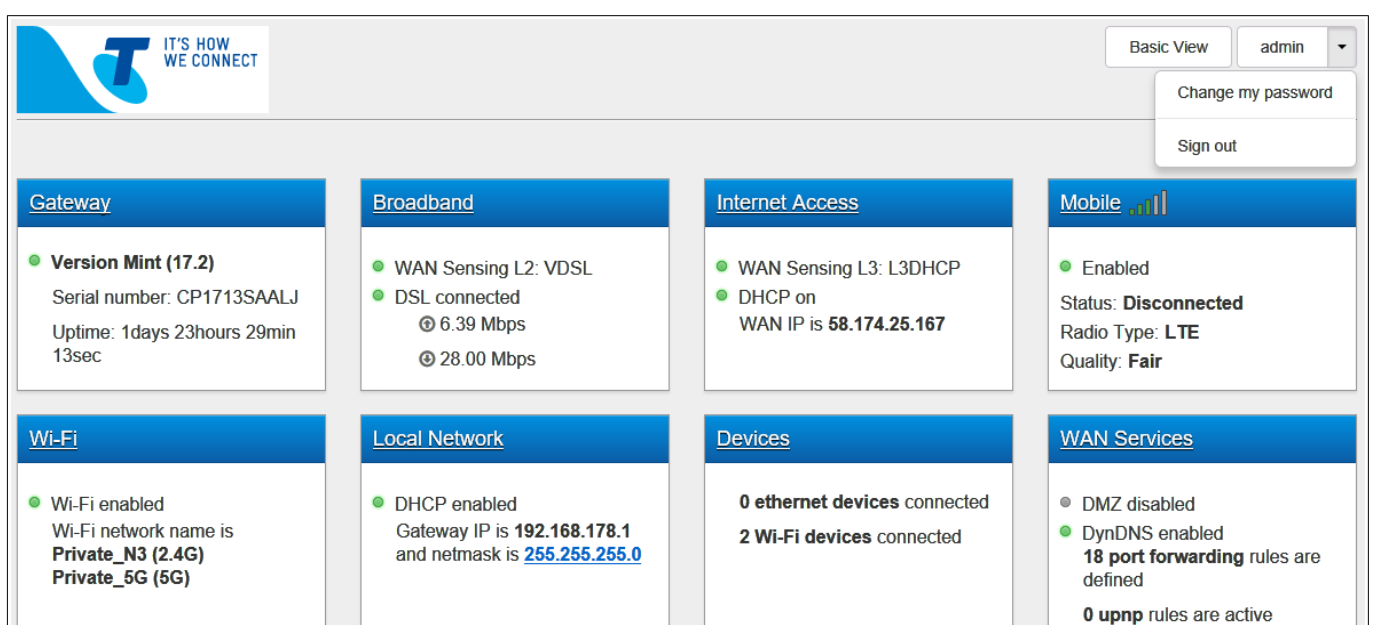

Clicking on “Basic View” takes you back to Basic Home screen.

To log out click on the down arrow to the right of “Admin” and select “Sign Out”

## 4. Change Modem’s Login Password

The Modem by default password is Telstra. It is recommend after log in to the modem you change the password. If you forget the password modem will need to be [reset to factory defaults](#)


Click on ‘User Settings’

Remove Tick from “Default User”

Enter a password in “Password” field

Enter the same password in “Confirm Password” field and click on Save

Password must contain at least 12 alphanumeric characters including both upper and lower case letters, at least one number and at least one special character such as !@#\$\$%^&\*()\_~?

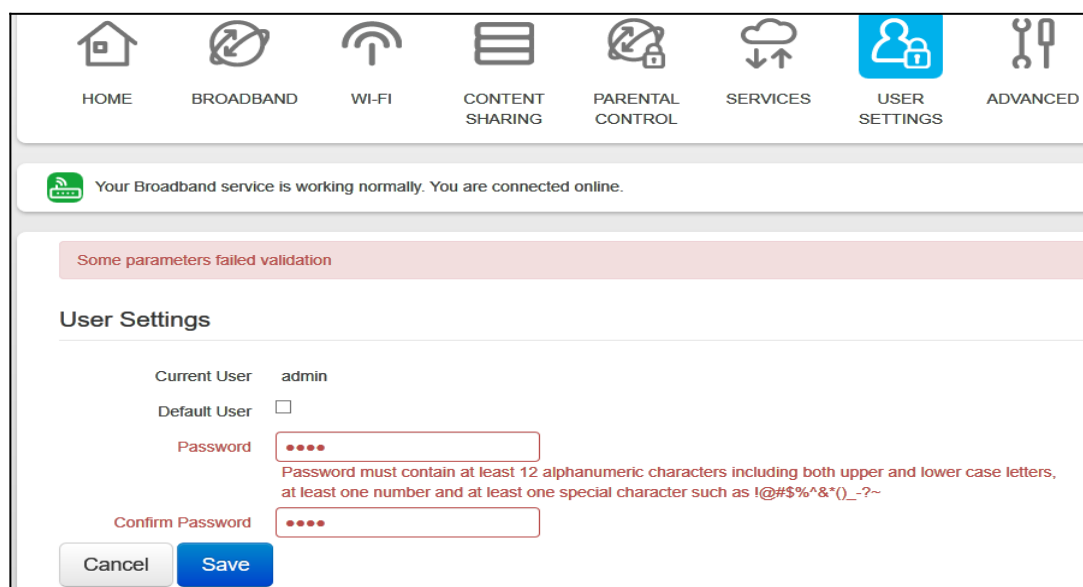

The screenshot shows the 'User Settings' page of a Telstra modem. At the top, there is a navigation bar with icons for HOME, BROADBAND, WI-FI, CONTENT SHARING, PARENTAL CONTROL, SERVICES, USER SETTINGS (highlighted), and ADVANCED. Below the navigation bar, a status message indicates 'Your Broadband service is working normally. You are connected online.' A red error banner states 'Some parameters failed validation'. The 'User Settings' section shows 'Current User' as 'admin' and 'Default User' as an unchecked checkbox. The 'Password' field contains four red dots, and the 'Confirm Password' field also contains four red dots. A red error message below the password fields states: 'Password must contain at least 12 alphanumeric characters including both upper and lower case letters, at least one number and at least one special character such as !@#\$\$%^&\*()\_~?'. At the bottom, there are 'Cancel' and 'Save' buttons.

In my opinion you don’t need a complicated password. Having a complicated password makes it likely that people will right it down and stick it on the modem or leave the default password. It is strange Telstra insists on a complicated password for accessing modem from LAN yet lets you use a simple four character password for remote access to modem over the internet.

## 5. Telstra's Internet User Name and Password

If WAN /DSL Light is green and the On Line light doesn't turn green these are the first settings you should check if you have a **non** NBN service.

Click on Broadband

The User Name is the one provided by Telstra for the internet connection. Example someone@bigpond.com. It is usually is but might not be the same as your Telstra My Account User Name and Password.

The screenshot shows the 'BROADBAND' tab selected in the top navigation bar. Below the navigation bar, a status message indicates: 'Your Broadband service is working normally. You are connected online.' The main content area is divided into two sections: 'Connection Information' and 'Connection Settings'.

**Connection Information**

| Item             | Value              |
|------------------|--------------------|
| Status           | IPv4 connected     |
|                  | IPv6 disconnected  |
| Uptime           | 01:35:11           |
| Data Transferred | 41.57 MB(Sent)     |
|                  | 16.07 MB(Received) |
| IPv4 Address     | 58.174.19.235      |
| Primary DNS      | 61.9.226.33        |
| Secondary DNS    | 61.9.226.1         |
| IPv6 Address     | ::                 |

**Connection Settings**

Type: IPoE

**PPPoE Settings**

|                  |                   |
|------------------|-------------------|
| Username         | luser@bigpond.com |
| Password         | ••••••••          |
| Confirm Password | ••••••••          |
| Mode             | Always On         |

At the bottom of the 'Connection Settings' section are two buttons: 'Cancel' and 'Save'.

## 6. Parental Control

Log in to modem and click on Parental Control

The screenshot shows the 'PARENTAL CONTROL' tab selected in the top navigation bar. Below the navigation bar, a status message indicates: 'Your Broadband service is working normally. You are connected online.' The main content area is titled 'Time of Day Access Control'.

| Status                            | Device | Start Time | Stop Time | Mode | Day of week |
|-----------------------------------|--------|------------|-----------|------|-------------|
| <a href="#">+ Create New Rule</a> |        |            |           |      |             |

**Legend**

- Disabled rule exists for the device
- Enabled rule exists for the device

Click on “Add New Rule”

Time of day access control

Status ☒ ON

Device

Enter the host name, MAC address or IP address of the device.

Mode ☒ Allow ☐ Block

Start Time

Stop Time

Day of week ☐ Mon. ☐ Tue. ☐ Wed. ☐ Thu. ☐ Fri. ☐ Sat. ☐ Sun.

The Modem will block/allow all the time if none of the days are selected

Make sure enabled is on.

Start typing the MAC or IP address of device in the MAC address field. A list of connected devices is displayed. Select the device you wish to apply a time of day rule to.

Select the Mode. “Allow” will only allow the device internet access during times specified. “Block” will block internet access to device during times specified.

Select “Start Time” and “End Time”.

Place a tick on the left of the days of the week that the rule will apply.

Click on add

| Status | Device        | Start Time | Stop Time | Mode  | Day of week                                                                                                                                                                                                                                                   | Edit | Delete |
|--------|---------------|------------|-----------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------|
| ●      | Dell-Notebook | 12:00      | 23:59     | block | <input type="checkbox"/> Mon. <input type="checkbox"/> Tue. <input type="checkbox"/> Wed. <input checked="" type="checkbox"/> Thu. <input checked="" type="checkbox"/> Fri. <input checked="" type="checkbox"/> Sat. <input checked="" type="checkbox"/> Sun. |      |        |
| ●      | Android-VOIP  | 12:00      | 23:59     | allow | <input type="checkbox"/> Mon. <input type="checkbox"/> Tue. <input checked="" type="checkbox"/> Wed. <input checked="" type="checkbox"/> Thu. <input type="checkbox"/> Fri. <input type="checkbox"/> Sat. <input type="checkbox"/> Sun.                       |      |        |

Legend

- Disabled rule exists for the device
- Enabled rule exists for the device

The image above shows two Time of day rules.

The first blocks internet access between midday and midnight on Thursday to Sunday.

The second only allows internet access between midday and midnight Tuesday to Thursday. Internet access is blocked at all other times.


To edit rule click on edit

To delete a rule click on Delete. Note clicking on delete deletes rule immediately with no confirmation message.


**Time of day rules only effect internet access they don't prevent devices connecting to WiFi.**

## Parental Controls Site Blocking

Log into Modem and go to Advanced > Parental Controls

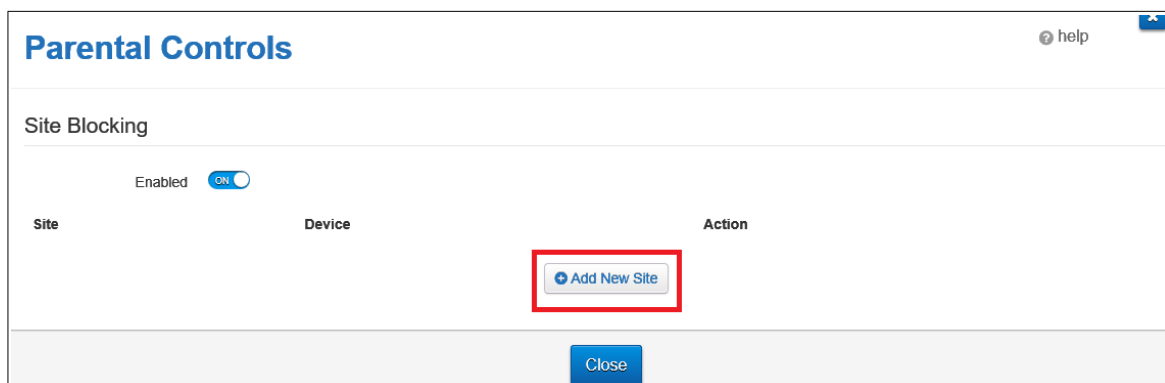


Click on “Add New Site”

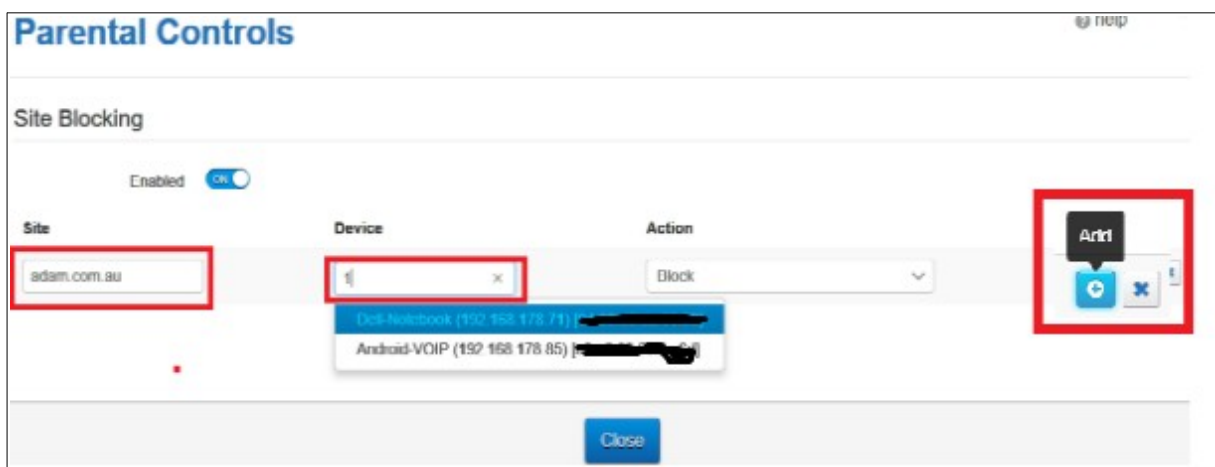

Enter site's URL

To block access to all devices enter “All” in Device field. To block access to a single device type 1 and its MAC address should appear in the list, If Device is not listed enter its address manually.


Click on “Add”

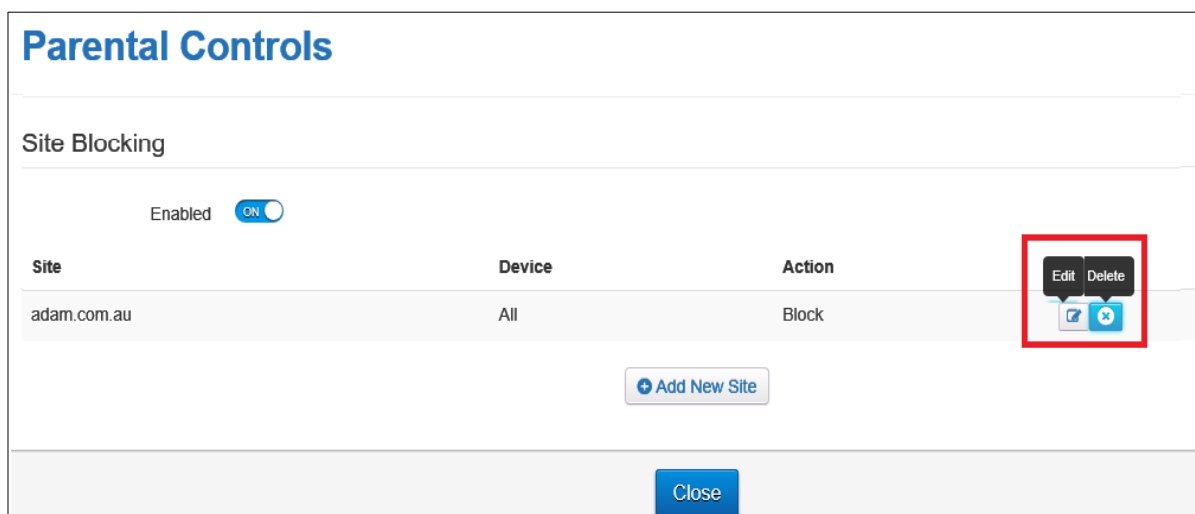

Rules can be edited or deleted by clicking on edit or delete.

Toggle Enabled to on and click on save.

If rule is successful will be redirected to <http://mymodem.modem/parental-block.lp> when trying to navigate to site.

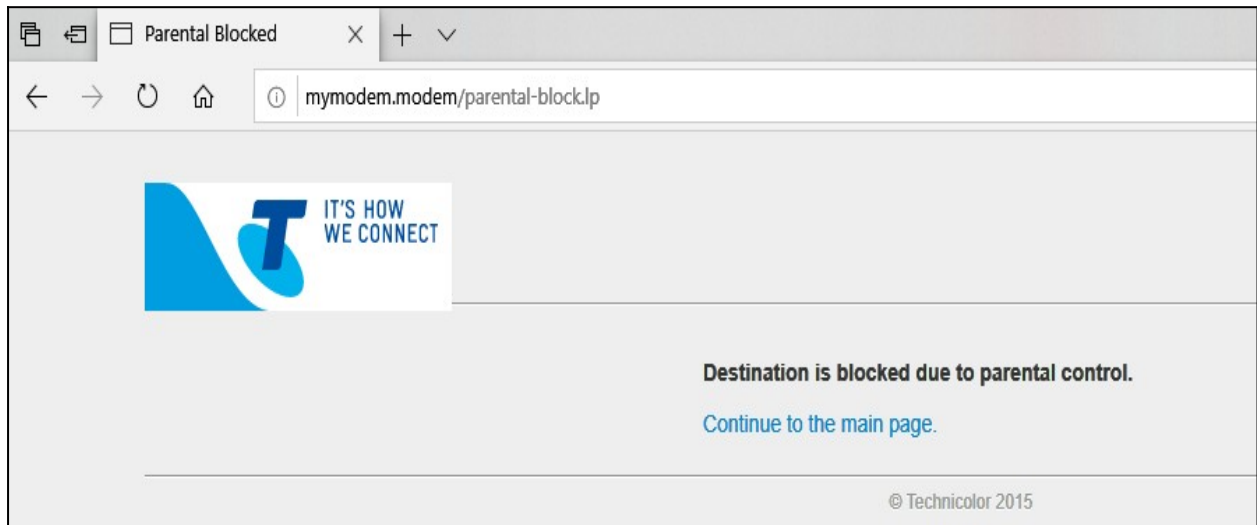

## 7. Connecting Wi-Fi Devices.

### 1. Using WPS

Press and hold the Pair button on the back of the modem for at least 5 seconds. The light will flash for 3 minutes during this time a WPS device can be connected, Follow the instructions supplied with the Wi-Fi device.

Note WPS has to be enabled in modem's GUI ([See Change Wi-Fi SSID and Password](#))

### 2. Manually using SSID and Network Key.


There is a label with the SSID and Network key located on the bottom of the modem. The SSID and Network key are also displayed on the home page of the modem. Follow the Wi-Fi device's instructions for manually connecting to a Wi-Fi network.

## 8. Address Reservation.


**Hint Before reserving an IP open a new WEB browser tab, log into modem and go to Advanced > Devices. You will be able to copy MAC address and paste them into the IP address reservation table.**

| Devices |                          |                 |                   |                   |      | refresh data | help |
|---------|--------------------------|-----------------|-------------------|-------------------|------|--------------|------|
| Devices |                          |                 |                   |                   |      |              |      |
| Status  | Hostname                 | IP address      | MAC address       | Type              | Port |              |      |
| ●       | Dell_Notebook            | 192.168.178.71  | 04:00:5E:00:53:53 | wireless - 2.4GHz |      |              |      |
| ●       | android-5090000000000000 | 192.168.178.85  | 08:00:27:00:00:00 | wireless - 2.4GHz |      |              |      |
| ●       | Dell_Notebook            | 192.168.178.144 | 00:00:00:00:00:00 | ethernet          | 4    |              |      |

To reserve a LAN IP address for device. (Static IP address) log into modem and go to Advance > Local Network

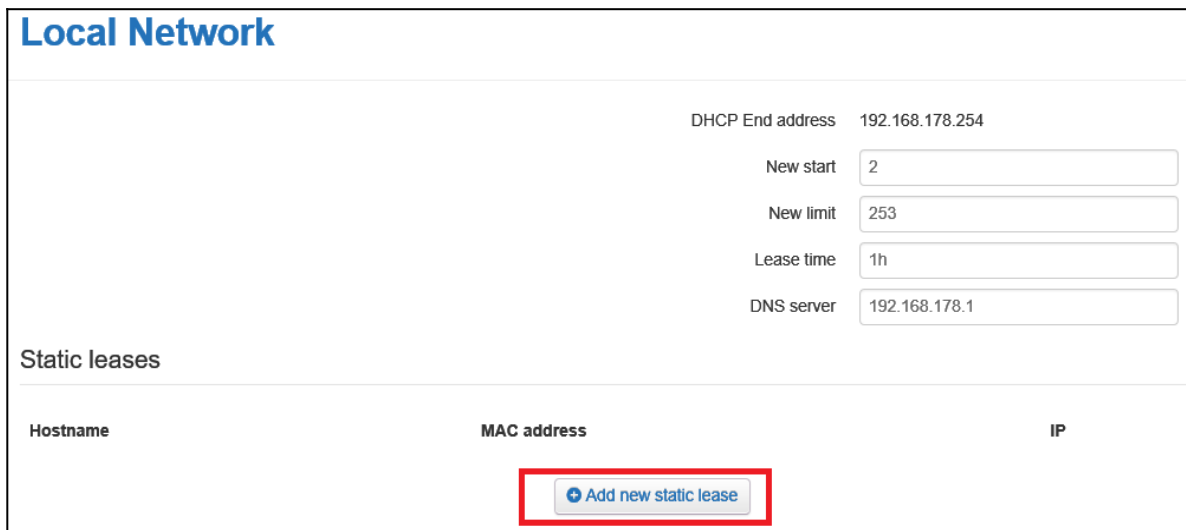

Click on “Add new static lease “

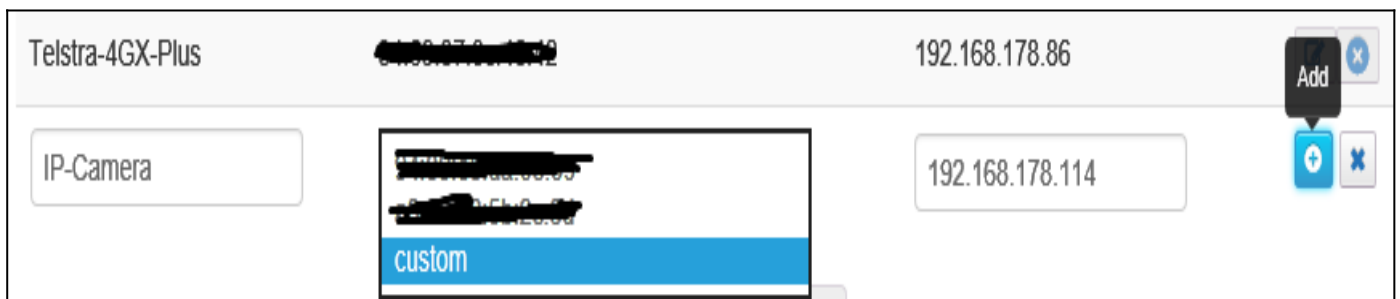

Start typing the IP address of device into IP field.

A list of all connected devices is displayed.

Click on the device that requires a fixed IP address.

The devices current IP address will automatically be entered into the table. This IP address can be changed to any unused IP address within address range of router.

Fill in Host name

Click on the down arrow in the MAC column to display a list of the connected devices.

If the device is listed click on it to automatically add its MAC address.

If the devices does not appear in the list of connected device click on custom and paste in the MAC address copied from the devices page or enter the MAC address manually

Click on apply

Note: If you changed the IPv4 Address the device will have to disconnect and reconnect for the new IP address to take effect.


## 9. Port Forwarding

For port forwarding to work you need a fixed IP LAN address. (See [Address Reservation](#) for how to do this)

Log in to Modem and go to Services > Port Forwarding

If adding a standard port click on down arrow on the right of “Add new port mapping” to display a list of common services.

Select a service from the drop down list.

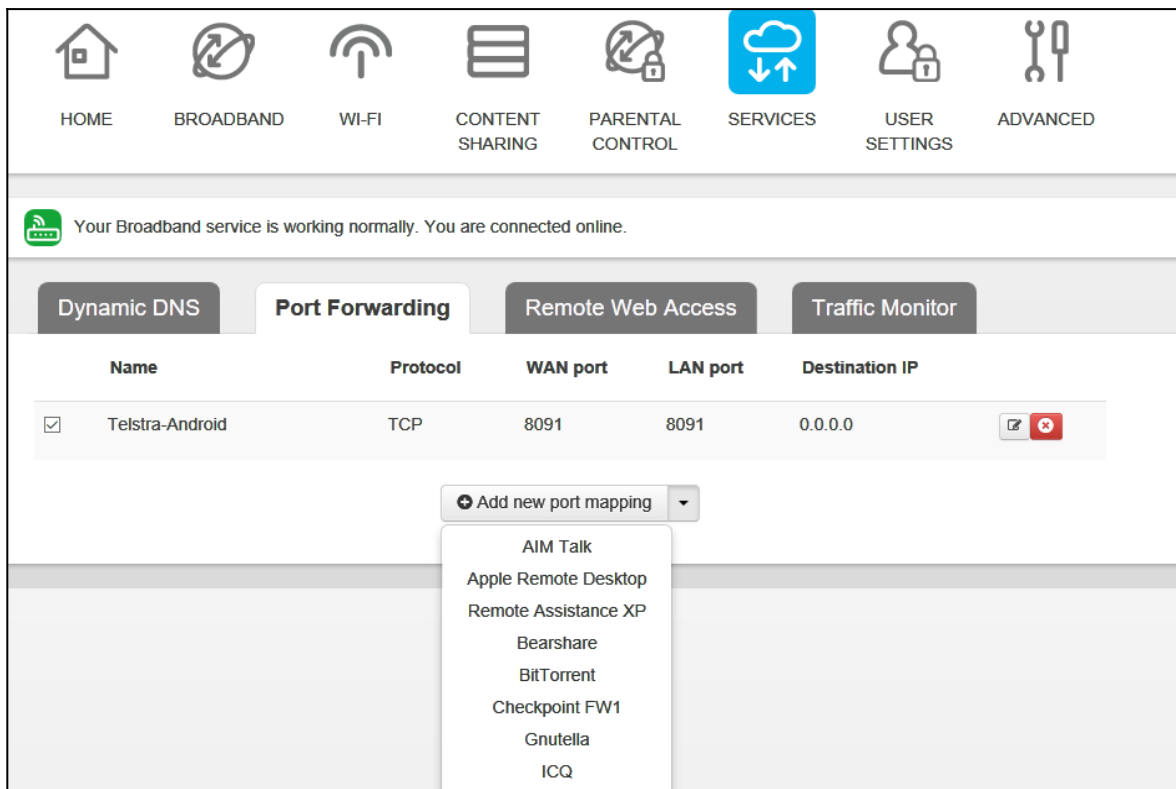

If mapping a non standard port click on “Add new port mapping”


Enter a meaningful name

Select protocol (TCP, UDP or TCP/UDP (both)). If in doubt select TCP/UDP

Type port number in WAN port and LAN port field. Best to use same port number. If there is a range of ports enter the first and last port numbers separated by a colon (eg 45:55)

Enter LAN IP address of device. A list of all currently connected device will be displayed.

Click on apply

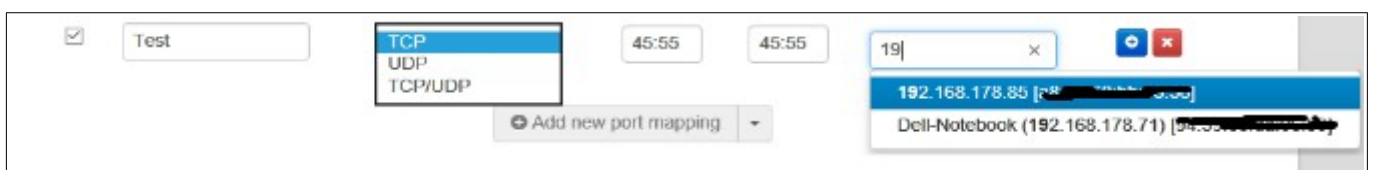


The port forwarding tool at <http://www.yougetsignal.com/tools/open-ports/> can be used to check if the port is open.

# 10. Inbuilt Help

At the Top right of each dialogue box is a **refresh** and **help** icon.


Clicking on refresh refreshes the data on the page.

Clicking on the help icon opens the inbuilt help open at the relevant page.

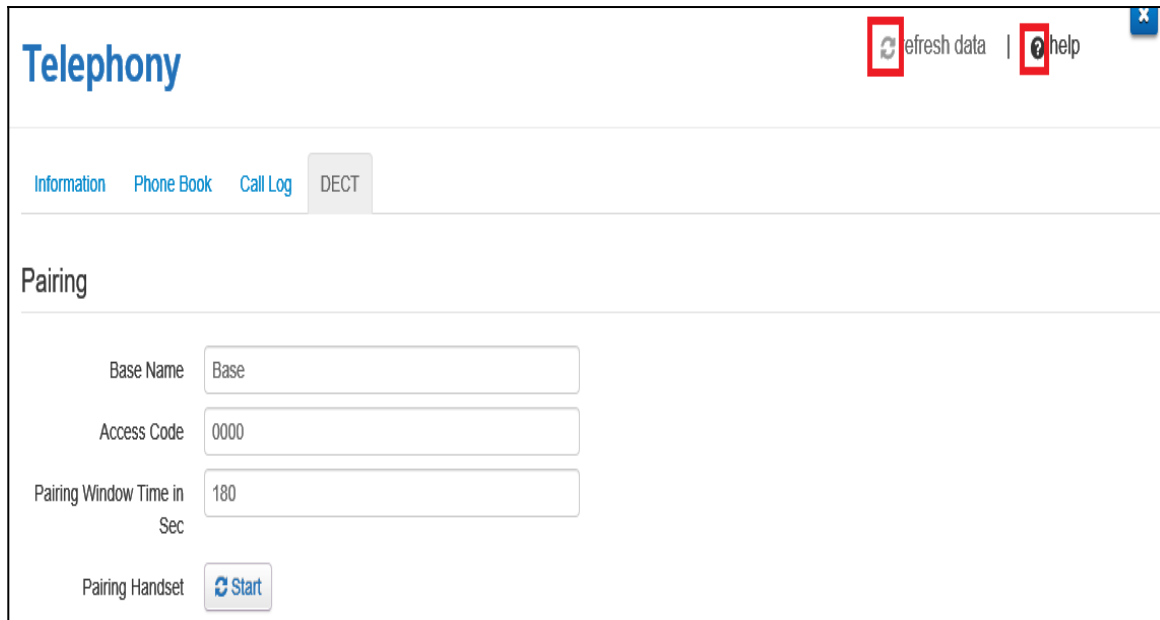

The screenshot shows the 'Telephony' interface with the 'DECT' tab selected. In the top right corner, there are two icons: a circular arrow labeled 'refresh data' and a question mark labeled 'help'. Both icons are enclosed in red rectangular boxes. Below the tabs, the 'Pairing' section contains three input fields: 'Base Name' with the value 'Base', 'Access Code' with the value '0000', and 'Pairing Window Time in Sec' with the value '180'. At the bottom, there is a 'Pairing Handset' label and a 'Start' button with a circular arrow icon.

Example Help displayed when on DECT page

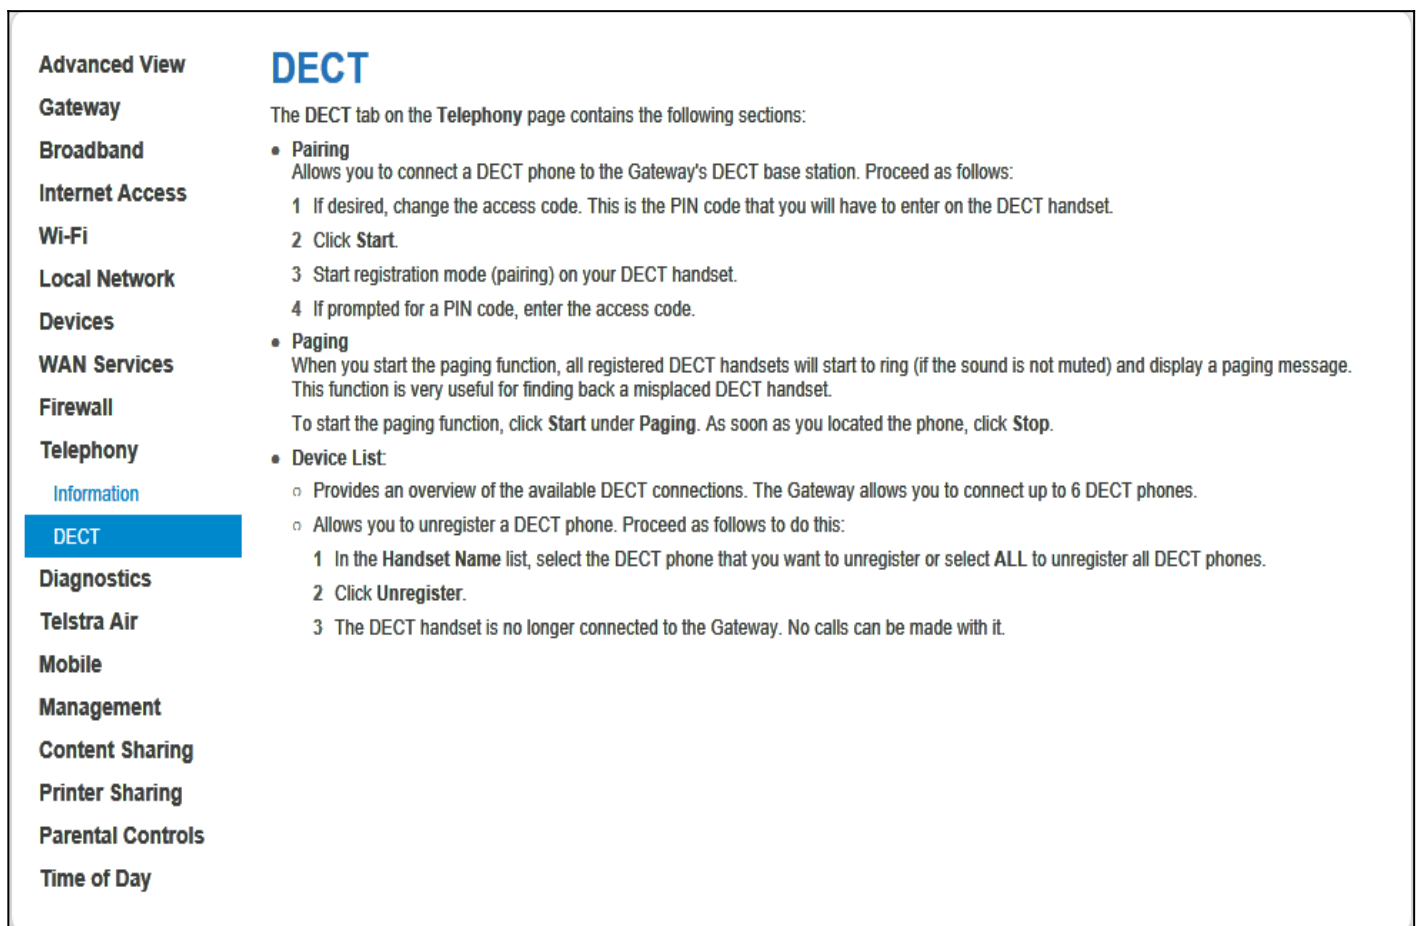


The screenshot displays the inbuilt help page for the DECT section. On the left is a sidebar menu with the following items: Advanced View, Gateway, Broadband, Internet Access, Wi-Fi, Local Network, Devices, WAN Services, Firewall, Telephony, DECT (highlighted in blue), Diagnostics, Telstra Air, Mobile, Management, Content Sharing, Printer Sharing, Parental Controls, and Time of Day. The main content area is titled 'DECT' and contains the following text: 'The DECT tab on the Telephony page contains the following sections:'. This is followed by a bulleted list: 'Pairing' (describing how to connect a DECT phone to the Gateway's base station with a 4-step numbered list), 'Paging' (describing the paging function and how to start/stop it), and 'Device List' (describing the overview of DECT connections and how to unregister a phone with a 3-step numbered list).

# 11. Firewall


Go to Advanced > Firewall

Select the level of protection and click on save

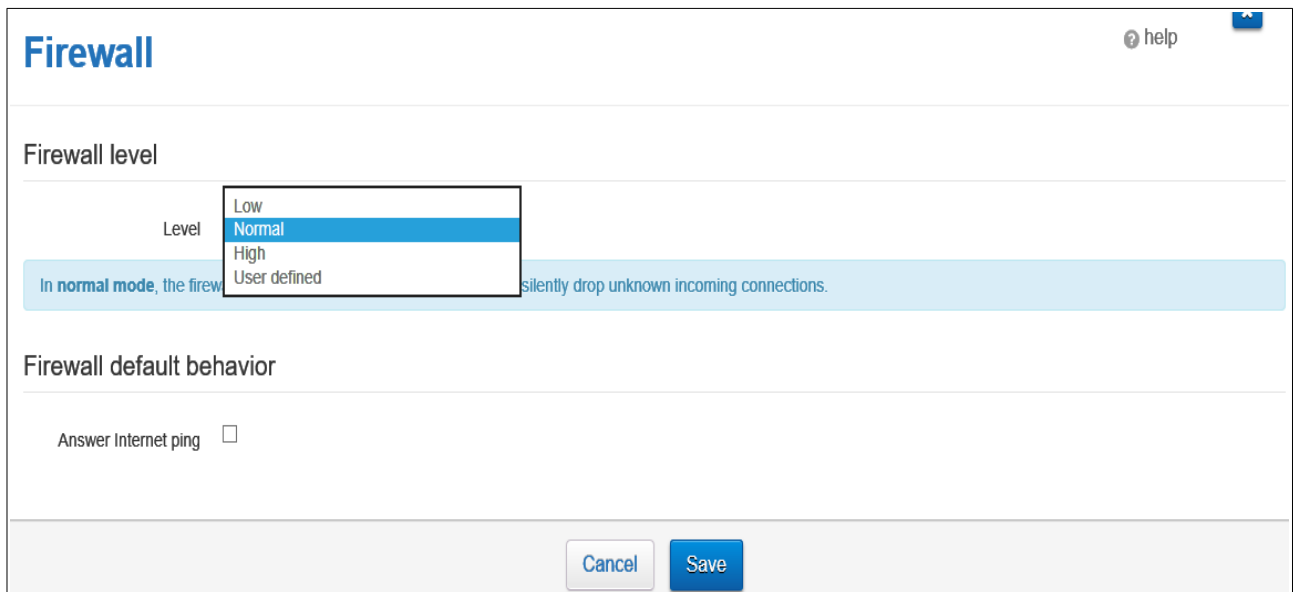

The screenshot shows the 'Firewall' configuration window. At the top, there is a 'Firewall level' section with a dropdown menu. The dropdown menu is open, showing four options: 'Low', 'Normal' (highlighted in blue), 'High', and 'User defined'. Below the dropdown, there is a blue informational bar that reads: 'In normal mode, the firewall silently drop unknown incoming connections.' Below this, there is a 'Firewall default behavior' section with a checkbox labeled 'Answer Internet ping' which is currently unchecked. At the bottom right, there are two buttons: 'Cancel' and 'Save'.

If User defined firewall is selected can select default incoming and outgoing policy.

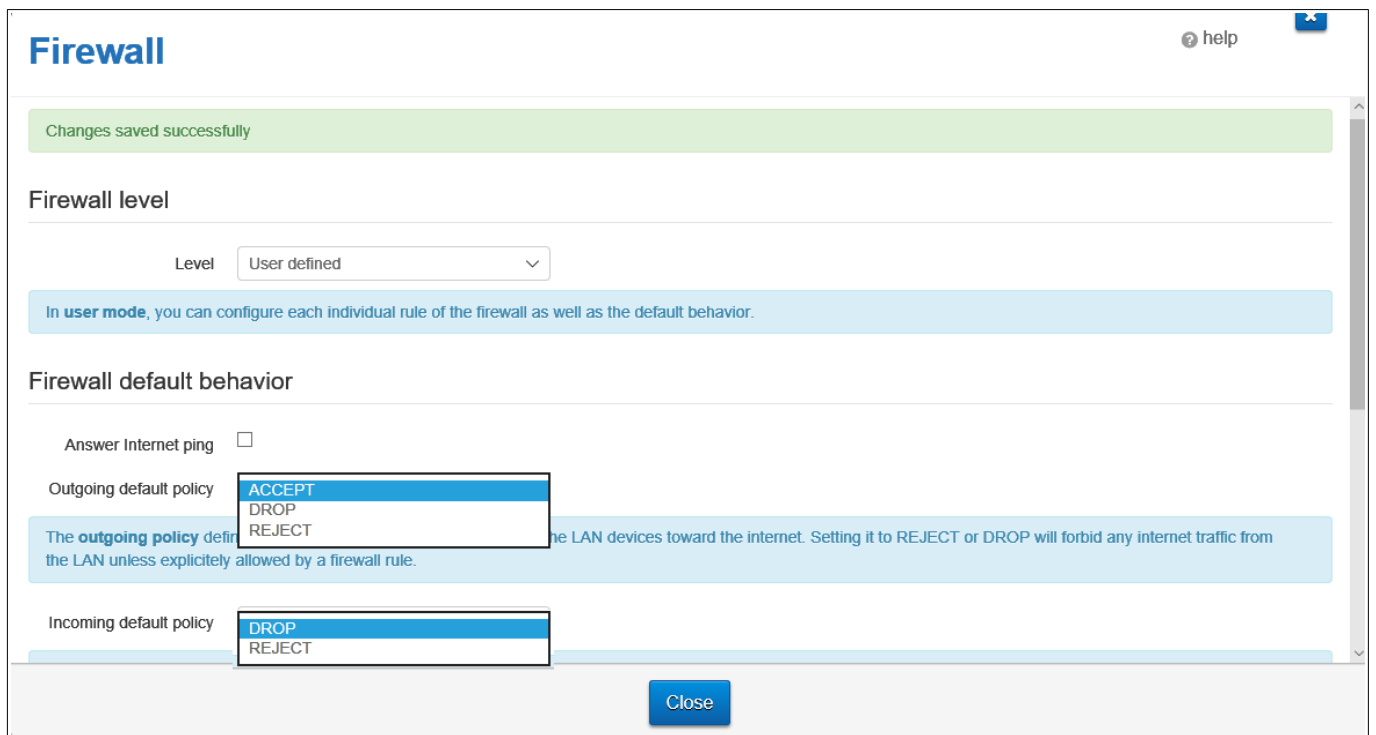

The screenshot shows the 'Firewall' configuration window after selecting 'User defined' as the firewall level. A green banner at the top indicates 'Changes saved successfully'. The 'Firewall level' section now shows 'User defined' selected in the dropdown. Below this, a blue informational bar reads: 'In user mode, you can configure each individual rule of the firewall as well as the default behavior.' The 'Firewall default behavior' section has the 'Answer Internet ping' checkbox unchecked. Below this, there are two dropdown menus for default policies. The 'Outgoing default policy' dropdown is open, showing three options: 'ACCEPT' (highlighted in blue), 'DROP', and 'REJECT'. Below it, a blue informational bar reads: 'The outgoing policy defines the default behavior of the LAN devices toward the internet. Setting it to REJECT or DROP will forbid any internet traffic from the LAN unless explicitly allowed by a firewall rule.' Below this, the 'Incoming default policy' dropdown is open, showing two options: 'DROP' (highlighted in blue) and 'REJECT'. At the bottom right, there is a 'Close' button.

Can also configured individual rules depending on source, destination and port by clicking on "Add new firewall rule"

Firewall

help

Incoming default policy
DROP

The **incoming policy** defines what is done with packets destined to the gateway. They can be either REJECTED (the gateway will notify the sender they were rejected) or DROPPED (the gateway will silently discard those packets).

Firewall rules

| Action                                   | Protocol | Src IP | Src port | Dst IP | Dst port |
|------------------------------------------|----------|--------|----------|--------|----------|
| <input checked="" type="checkbox"/> DROI | TCP      |        |          |        |          |
| <div>Add new firewall rule</div>         |          |        |          |        |          |

Firewall rules for IPv6

| Action                                | Protocol | Src IP | Src port | Dst IP | Dst port |
|---------------------------------------|----------|--------|----------|--------|----------|
| <div>Add new IPv6 firewall rule</div> |          |        |          |        |          |

## 12. Reset Modem.

There are two methods for resetting the modem.

- Using a paper clip press the modem's reset button for about 10 seconds. The reset button is located on back of modem near LAN port 2.
- Log into the modem, go to Advanced > Modem.  
Ticking "Retain Contacts" will retain contact information in phone book.  
Click on reset  
Modem will reboot. Front light will cycle through the colours of the rainbow..

Modem

Global Information

|                  |                                |                  |                          |
|------------------|--------------------------------|------------------|--------------------------|
| Product Vendor   | Technicolor                    | Restart Device   | <div>Restart</div>       |
| Product Name     | Technicolor DJA0231            | Factory Defaults | <div>Reset</div>         |
| Software Version | 18.1.c                         | Retain Contacts  | <input type="checkbox"/> |
| Firmware Version | 18.1.c.0384-950-RB             |                  |                          |
| Hardware Version | VCNT-A                         |                  |                          |
| DSL Version      | A2pvfbH043k.d26t               |                  |                          |
| Serial Number    | CP19                           |                  |                          |
| MAC Address      | 20                             |                  |                          |
| Uptime           | 18 hours 20 minutes 27 seconds |                  |                          |
| System Time      | 2019-10-23 21:35:40            |                  |                          |
| Network Timezone | <input type="checkbox"/>       |                  |                          |

Close

There is also an option to restart modem by selecting restart button.

## 13. Turn Wi-Fi OFF or ON.

There are two methods

1. Wi-Fi Switch back of modem

To turn Wi-Fi off press and hold the Wi-Fi switch located on back of modem for a couple of seconds. When released the light will turn off indicating all Wi-Fi bands have been turned Off

To turn Wi-Fi back on pressing the Wi-Fi button for a few seconds the light turns green.

2. GUI interface.

Connect to Modem via a LAN port.

Log into the modem and click on Wi-Fi


The 2.4Ghz band is pre-selected.

Click on the Enable box Below Wi-Fi Radio to toggle it to Off This disables all 2.4 GHz SSIDs

Click on Save

Repeat the procedure for 5Ghz


The Enable box below Wi-Fi Network is used to turn off the normal Wi-Fi band and leaves Guest Telstra Air and FON WiFi networks on.

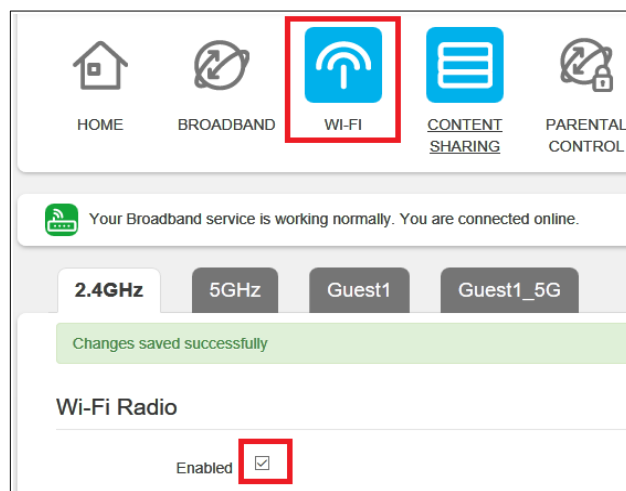

## 14. Bridge Mode.

Log into the modem and go to Advanced Local Network, remove tick next to IPv6 state and save settings

Go to Advanced > Local Network and scroll down to Network Mode

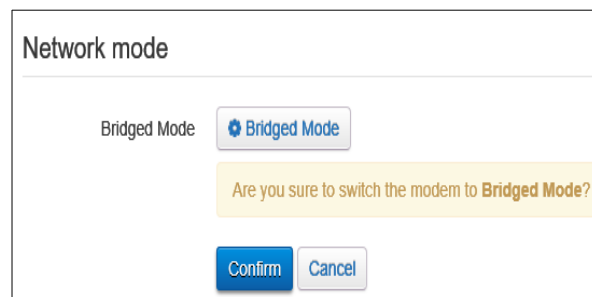

Click on \*Bridge Mode and then click on confirm. Modem will reboot.

When Modem has rebooted phone light will be orange, Link light and Front light will be green, Wireless Signal light will be green, orange or red depending on signal strength, all other lights off.

**Note: In bridge mode the phone and backup 4G will no longer work, and a factory reset is required to disable bridge mode resulting in loss of all settings.**

**Before Bridging Modem Turn off WiFi section 13 to prevent WiFi devices grabbing public IP**

# 15. Dynamic DNS

There are two locations for setting up Dynamic DNS.

1. Services/Dynamic DNS
2. Advanced /WAN Sevices / DynDNS

I will use the second location because it gives an indication when the service is working.

Click on the Enable switch to toggle it on.

Start typing the name of your provider and select provider from drop down list that appears.

Enter the DDNS URL without the http:// in domain box


Enter the DDNS Username.

Enter the password.

Click on Save.

Status will change from disabled (Grey) to updating (Orange).

Select refresh icon top right to refresh information.

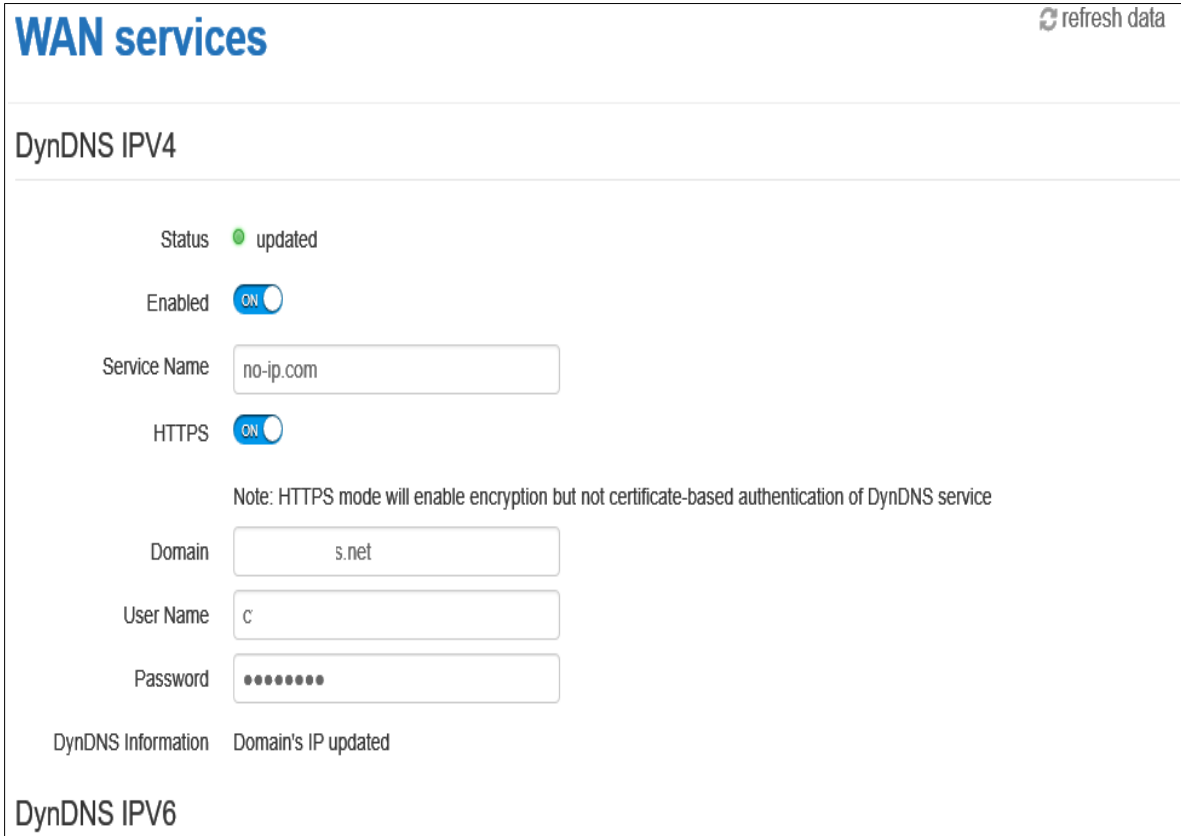

The screenshot shows the 'WAN services' configuration page for DynDNS. At the top right is a 'refresh data' button. The main section is titled 'DynDNS IPV4'. It includes a 'Status' indicator showing a green dot and the text 'updated'. Below this is an 'Enabled' toggle switch set to 'ON'. The 'Service Name' field contains 'no-ip.com'. There is an 'HTTPS' toggle switch also set to 'ON'. A note states: 'Note: HTTPS mode will enable encryption but not certificate-based authentication of DynDNS service'. Below the note are fields for 'Domain' (containing 's.net'), 'User Name' (containing 'c'), and 'Password' (masked with dots). At the bottom of the IPV4 section, it says 'DynDNS Information' and 'Domain's IP updated'. Below this is the 'DynDNS IPV6' section, which is currently empty.

If successful DynDNS Information will display “Domain’s IP updated” and status will have changed to updated (Green)

Repeat for IPv6 if your Dynamic DNS also supports IPv6.

# 16. Register and De-Register a DECT Handset

Can only register DECT CAT-iq2.0 handset. Not all DECT will pair with modem..

Press the Pair button on the back of the modem for at least five seconds. The button will starts flashing Green. The button will flash Green for 3 minutes.

While button is flashing the modem is ready to pair with the handset.

Follow the handset's documentation for pairing the handset. (Default Pin is 0000)

When the handset is paired the Pair light will turn green, If unsuccessful pair light will turn red.

**Telephony**

Information Phone Book Call Log **DECT**

**Pairing**

Base Name

Access Code

Pairing Window Time in Sec

Pairing Handset

**Paging**

Paging Handset

Can also pair handset and change pin from within GUI (Advanced > Telephony > DECT)

To register or pair a handset click on “Pairing Handset” Start

To page a handset press pair button on back of modem for less than 2 seconds. To stop paging press pair button again.

To de-register (un-pair) a handset log into the modem and go to Advanced > Telephony > DECT.

| Name      | Handset ID | State   |
|-----------|------------|---------|
| Handset 1 | 014441D222 | Located |
| Handset 2 | 0000000000 | Unknown |
| Handset 3 | 0000000000 | Unknown |
| Handset 4 | 0000000000 | Unknown |
| Handset 5 | 0000000000 | Unknown |
| Handset 6 | 0000000000 | Unknown |

Handset Name

DECT Emission

Emission Mode

Scroll down to bottom of page

Select handset from drop down list and click on “Unregister”

The handset is de-registered.

To turn off DECT Transmitter click on Emission Mode Disable.

# 17. Telephony (Information and Call log)

Log in to Modem and go to Advanced > Telephony

## Information

| Telephony                                           |                     |                        |                               |                   |                                                                           |                                      |         |
|-----------------------------------------------------|---------------------|------------------------|-------------------------------|-------------------|---------------------------------------------------------------------------|--------------------------------------|---------|
| <a href="#">refresh data</a>   <a href="#">help</a> |                     |                        |                               |                   |                                                                           |                                      |         |
| SIP Profile                                         | UserName            | URI                    | DisplayName                   | Network           | Port                                                                      | Registered                           | Status  |
| sip_profile_0                                       | prdoc02_5i          | !2@connect.telstra.com | +61                           | SIP network       | Phone 1, Handset 1, Handset 2, Handset 3, Handset 4, Handset 5, Handset 6 | <span style="color: green;">●</span> | On hook |
| sip_profile_1                                       | profile2            | profile2               | profile2                      | SIP network       |                                                                           | <span style="color: gray;">●</span>  | Idle    |
| sip_profile_2                                       | profile3            | profile3               | profile3                      | SIP network       |                                                                           | <span style="color: gray;">●</span>  | Idle    |
| sip_profile_3                                       | profile4            | profile4               | profile4                      | SIP network       |                                                                           | <span style="color: gray;">●</span>  | Idle    |
| SIP Network                                         |                     |                        |                               |                   |                                                                           |                                      |         |
| Name                                                | Primary Registrar   | Primary RegistrarPort  | Primary Proxy                 | Primary ProxyPort | Expire Time                                                               |                                      |         |
| SIP network                                         | connect.telstra.com | 5060                   | sa.hybrid.connect.telstra.com | 0                 | 3600                                                                      |                                      |         |

## Call Log

| Call Log                          |                     |              |               |           |           |  |
|-----------------------------------|---------------------|--------------|---------------|-----------|-----------|--|
| Time                              | Call Type           | Local Number | Remote Number | Duration  | Port      |  |
| 2019-10-25 15:34:55               | Outgoing Successful | +61          |               | 00:00:17s | Handset 1 |  |
| 2019-10-25 15:31:49               | Outgoing Successful | +61          |               | 00:00:04s | Handset 1 |  |
| 2019-10-25 12:53:04               | Incoming Missed     | +61          |               | 00:00:00  | Phone 1   |  |
| 2019-10-25 13:21:36               | Outgoing Successful | +61          | 101           | 00:00:39s | Phone 1   |  |
| <a href="#">⚡ Clear call logs</a> |                     |              |               |           |           |  |
| Call Statistics                   |                     |              |               |           |           |  |

The Log can be cleared by tapping or clicking on the clear call logs.

## VoLTE

| Information          | VoLTE                                                     | Call Log | DECT |
|----------------------|-----------------------------------------------------------|----------|------|
| VoLTE Service        |                                                           |          |      |
| VoLTE Service Status | Your phone service is available for emergency calls only. |          |      |
| VoLTE APN            | sos                                                       |          |      |

## 18. Remote Web Access.

To turn Remote Web Access on log into modem and go to Basic > Services > Remote Web Access

The screenshot shows the 'Remote Web Access' configuration page. At the top, there are four tabs: 'Dynamic DNS', 'Port Forwarding', 'Remote Web Access' (selected), and 'Traffic Monitor'. A green banner at the top says 'Changes saved successfully'. Below it, a blue box contains the text: 'Remote assistance is currently disabled. By clicking on the 'Apply' button with the 'Enabled' checkbox enabled your gateway will be accessible from your broadband connection. After 30 minutes of inactivity, or on reboot, remote assistance will be automatically disabled. Please provide the following parameters to your ISP:'. The configuration fields are: 'Enabled' with a checked checkbox, 'Mode' with 'Temporary' selected (radio button) and 'Permanent' unselected, 'Username' with the value 'assist', 'Use Random Password' with a checked checkbox, and 'Password' with an empty text box. At the bottom are 'Cancel' and 'Apply' buttons.

Place a tick next to “Enabled”

Select “Temporary” or “Permanent” and click on “Apply”

The screenshot shows the 'Remote Web Access' configuration page after applying the settings. The 'Remote Web Access' tab is still selected. A green banner at the top says 'Changes saved successfully'. Below it, a blue box contains the text: 'Remote access is currently enabled. Click 'Apply' button with the 'Enabled' checkbox disabled to disable remote assistance on your gateway'. The configuration fields are: 'Enabled' with a checked checkbox, 'Mode' with 'Temporary' selected, 'Username' with the value 'assist', 'Use Random Password' with the value 'Yes', and 'Password' with the value 'cjTxq4CYe4'. The 'URL' field, which contains 'https://3.141.23.107:55483', is highlighted with a red box. The 'Username' field, which contains 'assist', is also highlighted with a red box. The 'Password' field, which contains 'cjTxq4CYe4', is highlighted with a red box.


If use random password is ticked, a random password will be generated.

To connect remotely open a browser and navigate to the URL

A warning message will be displayed.

Below is the warning message displayed using the Edge Browser.

Click on “Details” and then click on “Go on to WEB page” to display log in screen.

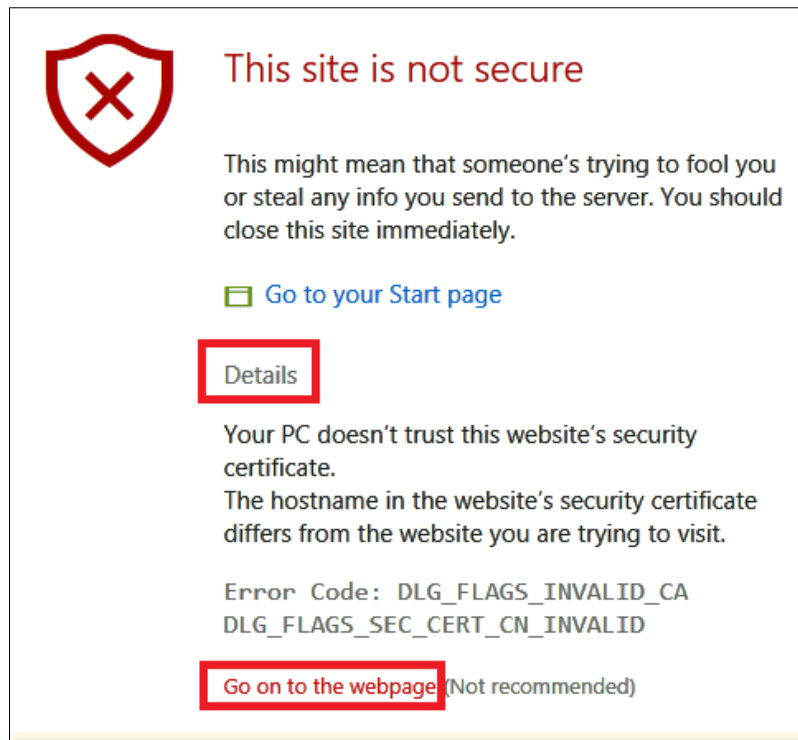

Use the User name assist and the password displayed in the Password field to log in to GUI of modem.




**NB: Remote Web access turns of if modem reboots.**

**Remote Web access locks up and requires reboot to fix if modem switches to 4G backup and then back to main link.**


# 19. Wi-Fi MAC Filtering

Log into modem, go to Advanced > WiFi

Select Access Point

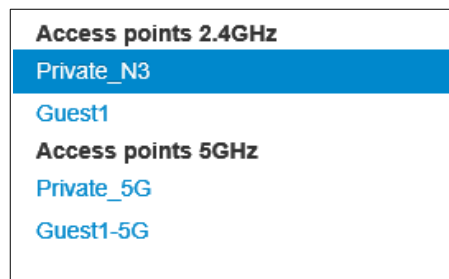


Scroll down to Access Control List

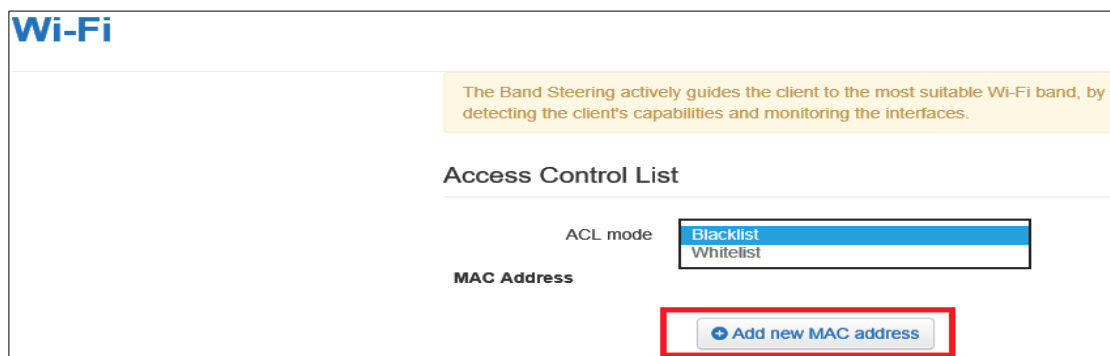

There are two Modes:

1. Blacklist: Listed devices will not be able to connect to WiFi
2. White list: Only devices in list will be able to connect.

Select mode and click on Add new MAC address.

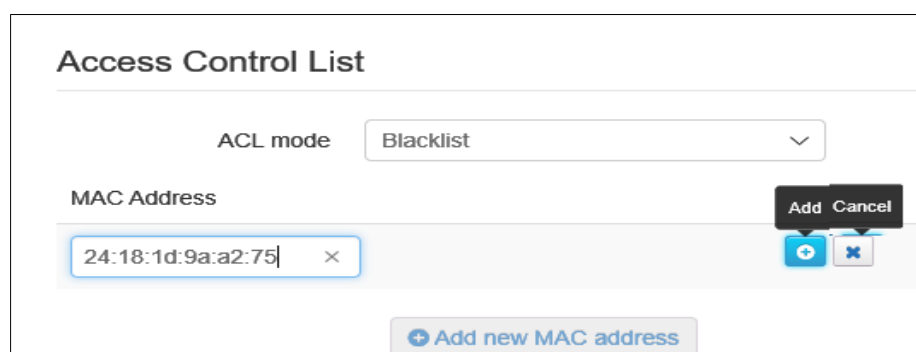

Enter Mac Address and click on Add

**Hint: Open a new Web Browser tab, log into Modem and go to Advanced > Devices  
Can then copy MAC address from Devices page and paste into Access Control List**


**Note If using White list modem automatically populates list with all connected devices after first MAC address has been entered. These are only displayed when screen is refreshed.**

Repeat for all devices that are to be added to list.

Repeat for all Access Points. (5G, Guest, 5G and Guest\_5G)

## 20. Management

To add a new Modem user or to change name go to Advanced > Management > User Manager

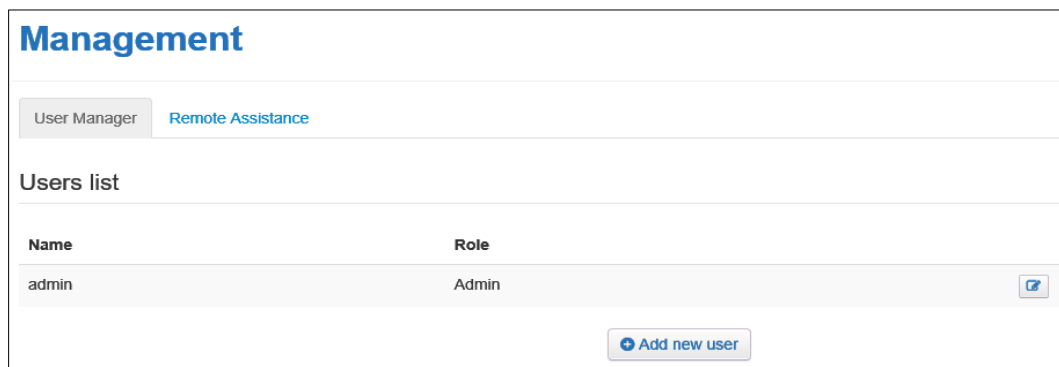

**Management**


User Manager Remote Assistance

Users list

| Name  | Role  |
|-------|-------|
| admin | Admin |

Add new user

To add new user Click on “Add new user”

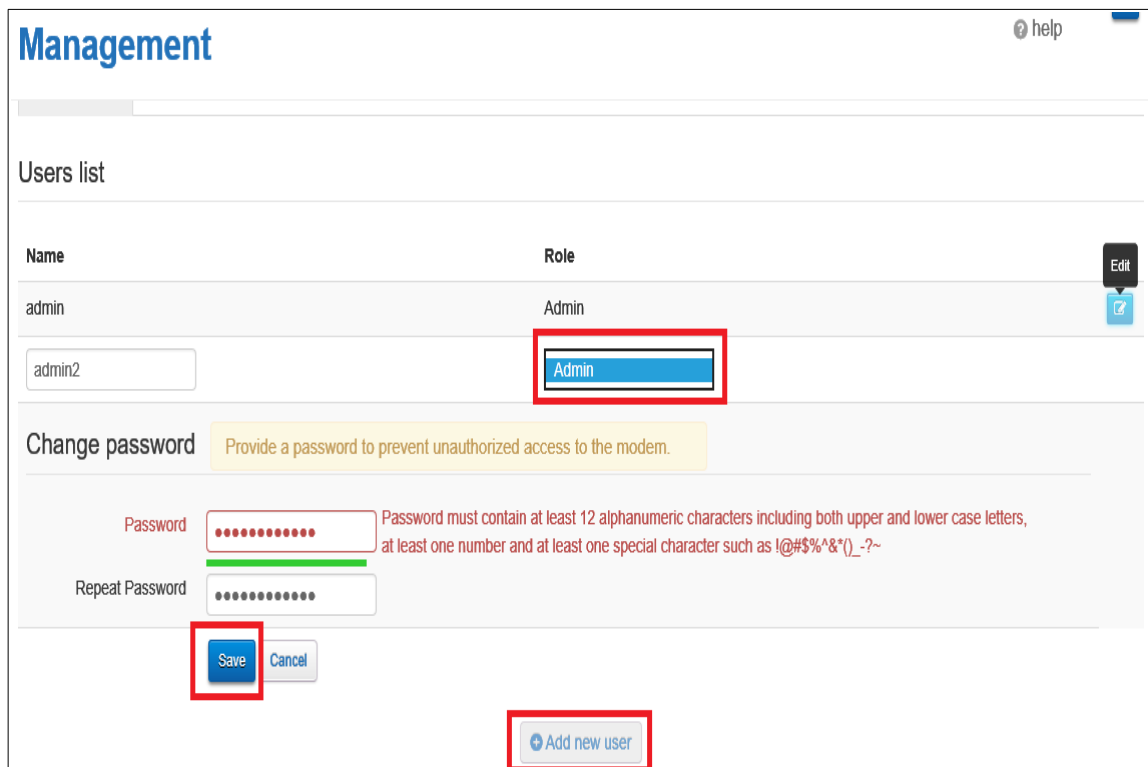

**Management** help

Users list

| Name  | Role  |
|-------|-------|
| admin | Admin |

admin2 Admin

Change password Provide a password to prevent unauthorized access to the modem.

Password Password must contain at least 12 alphanumeric characters including both upper and lower case letters, at least one number and at least one special character such as !@#\$\$%^&\*()\_~?~

Repeat Password

Save Cancel

Add new user

Fill in the name

Select type of user. Only Admin available. Admin user can edit settings,

Fill in the password and repeat password field and click on “Add”

To edit an existing user click on “Edit”.

To delete a user click on “Delete”

| Users list |       |        |
|------------|-------|--------|
| Name       | Role  |        |
| admin      | Admin | Edit   |
| admin2     | Admin | Delete |

## 21. Change Wi-Fi Channel, SSID or Password.

In Basic Mode click on Wi-Fi

Speed 52Mbps

Channel Auto

Region AU

Current Channel 11

Channel Width Auto (20/40MHz)

### Wi-Fi Network

Enabled ☒

Network Name [Redacted]

Security Mode WPA2 PSK

Network Key [Redacted]

WPS ☒

WPS AP PIN Enabled ☐

WPS AP PIN Code 43269716

WPS Device PIN Code [Redacted] [Set PIN code](#)

Connect using WPS [Start](#)

Band Steering Enabled ☐

Select Wi-Fi Band you wish to change

To change Channel select a channel from the drop down list

To change the WiFi SSID enter new SSID in Network name field.


To change password enter new password in the Network Key field.

To use separate SSID for 5G Band Band steering must be turned off in 2.4G Band tab.

When all changes have been made click on save.

Note: If you use your old Modem's SSID and Password you don't need to reconfigure Wi-Fi settings on Wi-Fi devices that could connect to the old Modem.

## 22. Third Party VDSL Modem Router

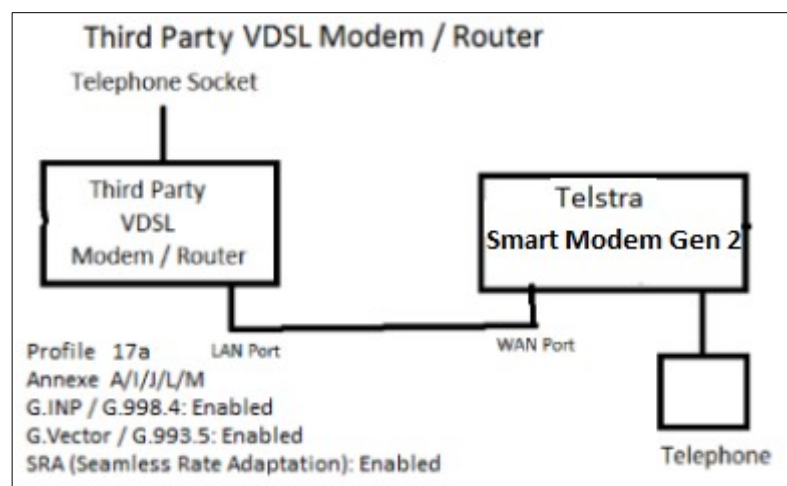

Connect as per diagram.

No special settings required in Telstra Smart Modem Gen 2.

Turn Wi-Fi Off on Telstra Smart Modem Gen 2.

In third party modem set connection type as DSL and no login ID or password required (IPOE).  
If you have trouble with phone change SIP/ALG settings and or set a static address for Smart Modem in Third party VDSL and port forwarding (TCP/UDP 5060-5061, 3478 and UDP 5004, 10000-20000) to Smart Modem Modem

Note Before using this set up Smart Modem must be connected directly to NBN to enable registration of VOIP in Modem.

## 23. DLNA Server and USB Mass Storage.

The Modem acts as DLNA server for media files on drives connected to USB ports.

**A powered USB Hub can be plugged into the USB port to allow the connection of several drives**

To turn DLNA on or off go to Advanced > Content Sharing and place or remove tick next to “DLNA Enabled” and click on save.

**Content Sharing** refresh data | help

**General status**

**File Server Enabled** ☒ Enabled allows access to attached hard drives using SMB 1.0

File Server name: Telstra-Modem

File Server workgroup: WORKGROUP

File Server description: Telstra Modem

**DLNA Enabled** ☒ Enabled allows DLNA clients to access media files on attached USB hard drives

DLNA name: Telstra Modem

**Hard Disk Information**

Currently there is 1 connected device

| Port | Product Name | Manufacturer | Power      | Version | File System | Total Space | Used Space | Free Space | Volume | Share                                     | Eject |
|------|--------------|--------------|------------|---------|-------------|-------------|------------|------------|--------|-------------------------------------------|-------|
| 1-1  | Expansion    | Seagate      | High Power | 3.00    | ntfs/hfs+   | 1863.01GB   | 545.80GB   | 1317.22GB  | sda1   | \\192.168.178.1\\Seagate_Expansion_1_b972 | Eject |

Click to safely remove USB drives

Path to access USB drives using SMB


Cancel Save

### Mass Storage

To turn File sharing on or off go to Advanced > Content Sharing and place or remove tick next to “File Server Enabled” and click on save.

Before removing a USB drive click on Eject


On a Windows PC can connect to drives connected to the USB ports by opening File Explorer and typing the address shown at the bottom right of the Content sharing page into the address bar of File explorer. (Your address will be different depending on IP address off you modem and the name of the attached USB drive)

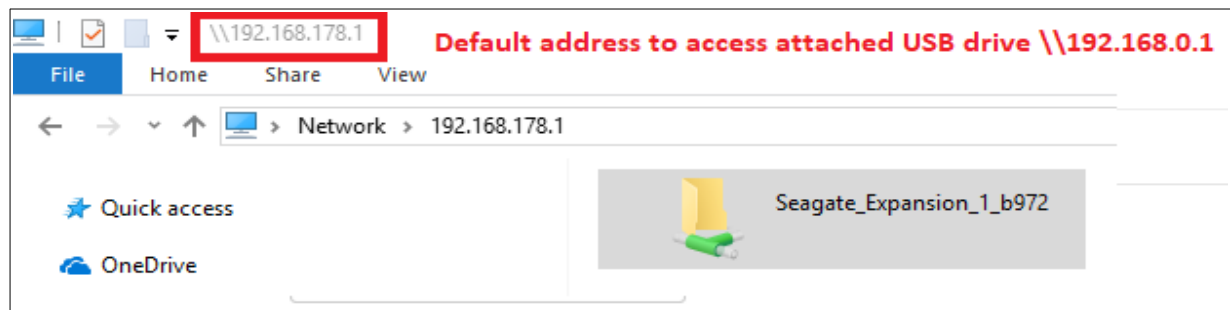

If you cannot access the drive check that Network is set to Private, Network Discovery is on and SMB 1.0 file sharing support is enabled

To check Network discovery is on

Go to Control Panel > All Control Panel Items > Network and Sharing Centre > \Advanced sharing settings and “Turn on Network Discovery” and “Turn on File and Printer Sharing”

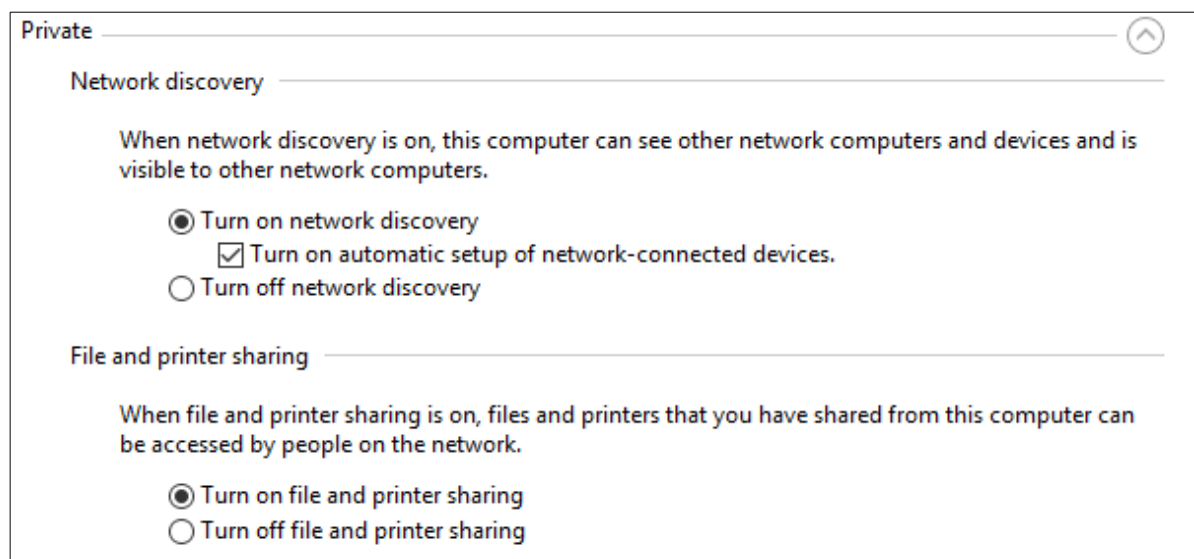


To ensure that SMB 1.0 file sharing support is on

Clicking on Start

Start typing Turn Windows Features On or Off


When “Turn Windows Features On or Off” appears in list of suggestion click on it.

Scroll down to “SMB 1.0 file sharing support” and place a tick in the box.

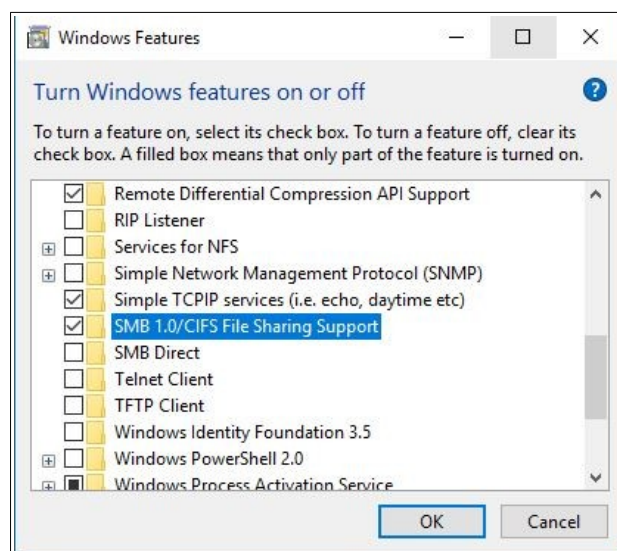


# 24. Traffic Monitor


To view traffic meters log into Modem and go to > Services > Traffic Monitor

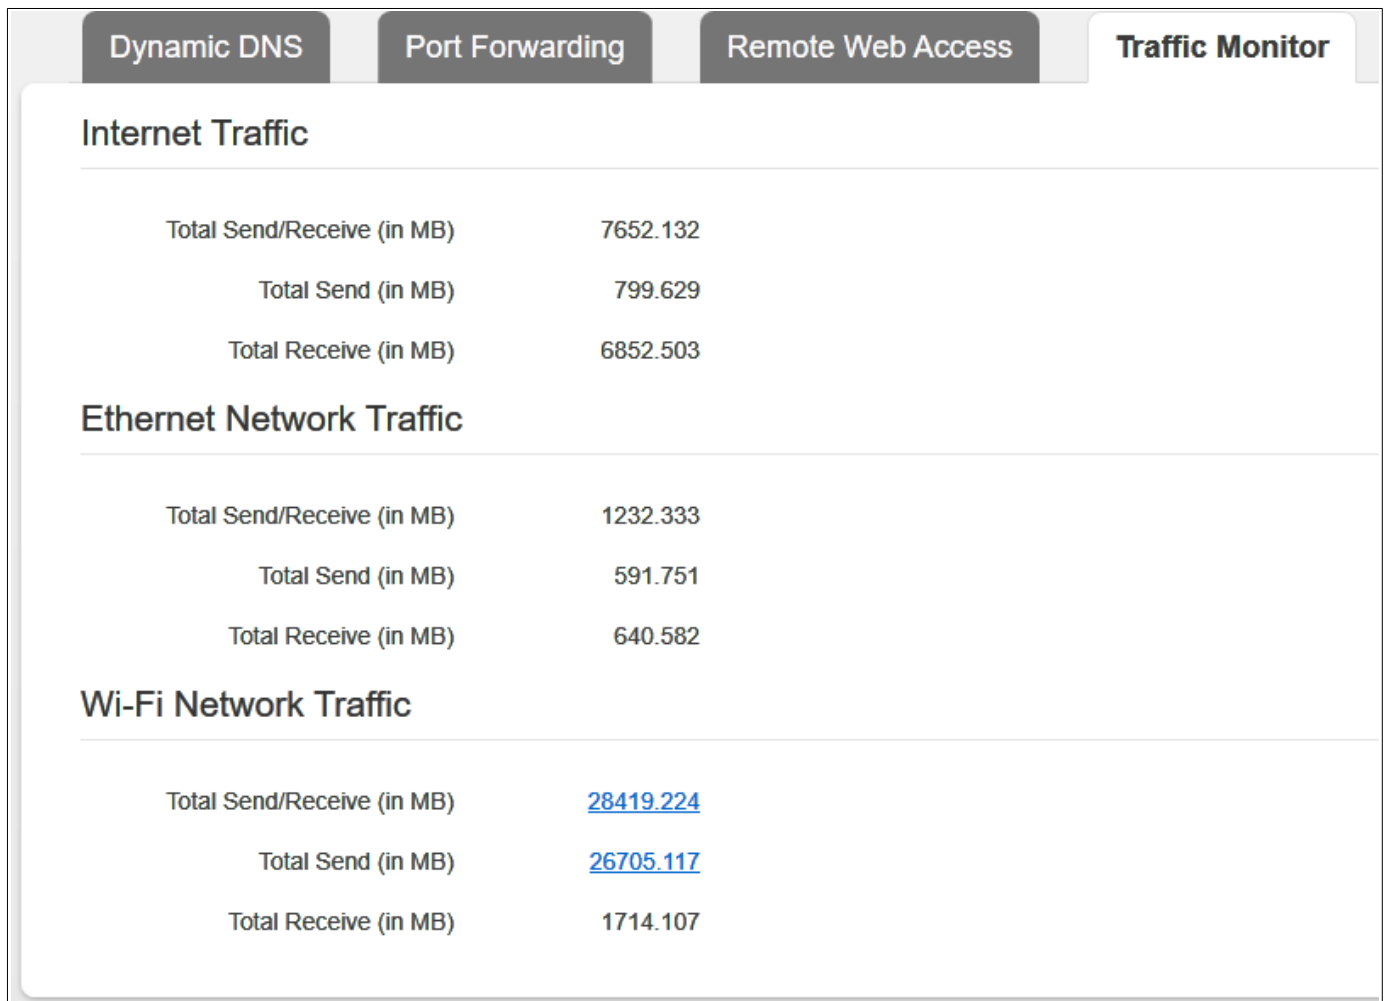


## Internet and LAN Ethernet Traffic past 24 hours Graph

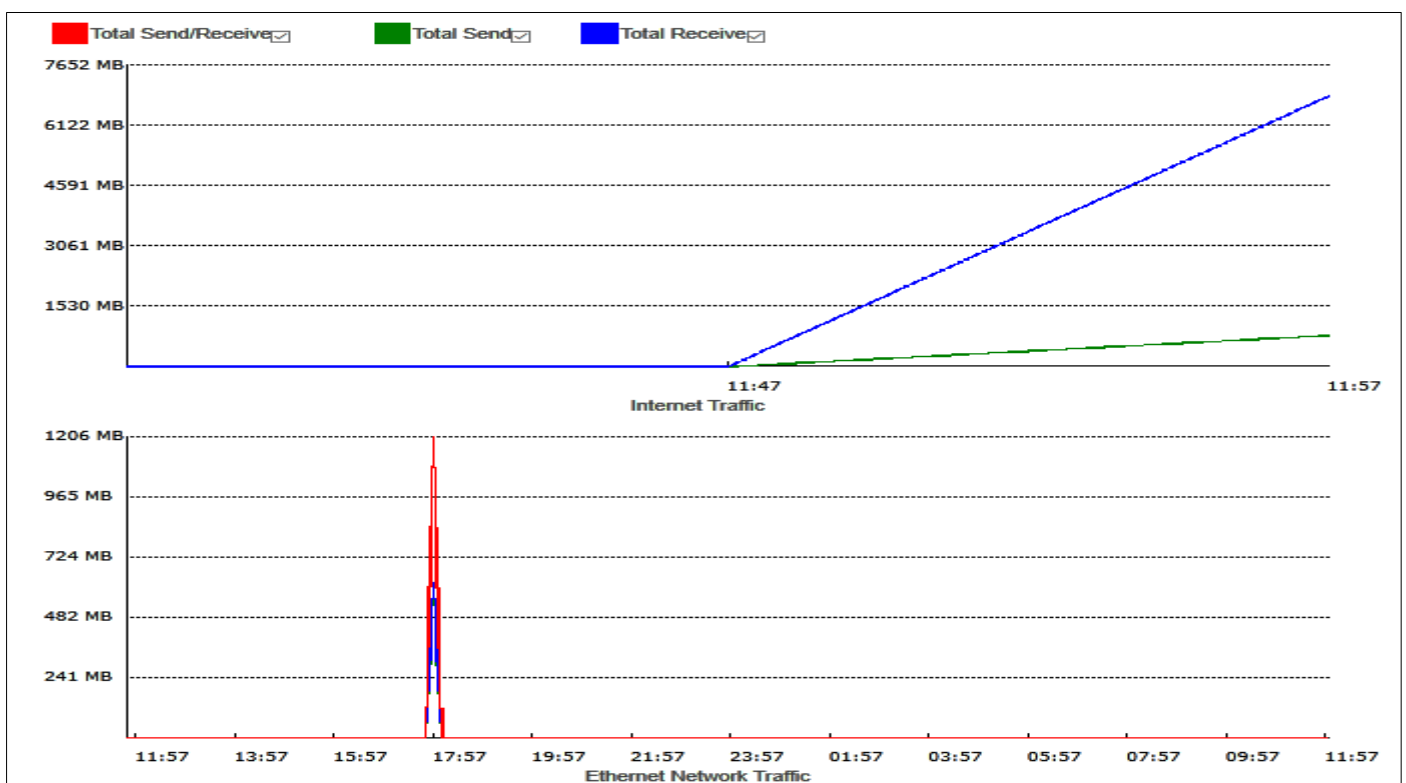

## 2.4G WiFi Band Traffic past 24 hours Graph

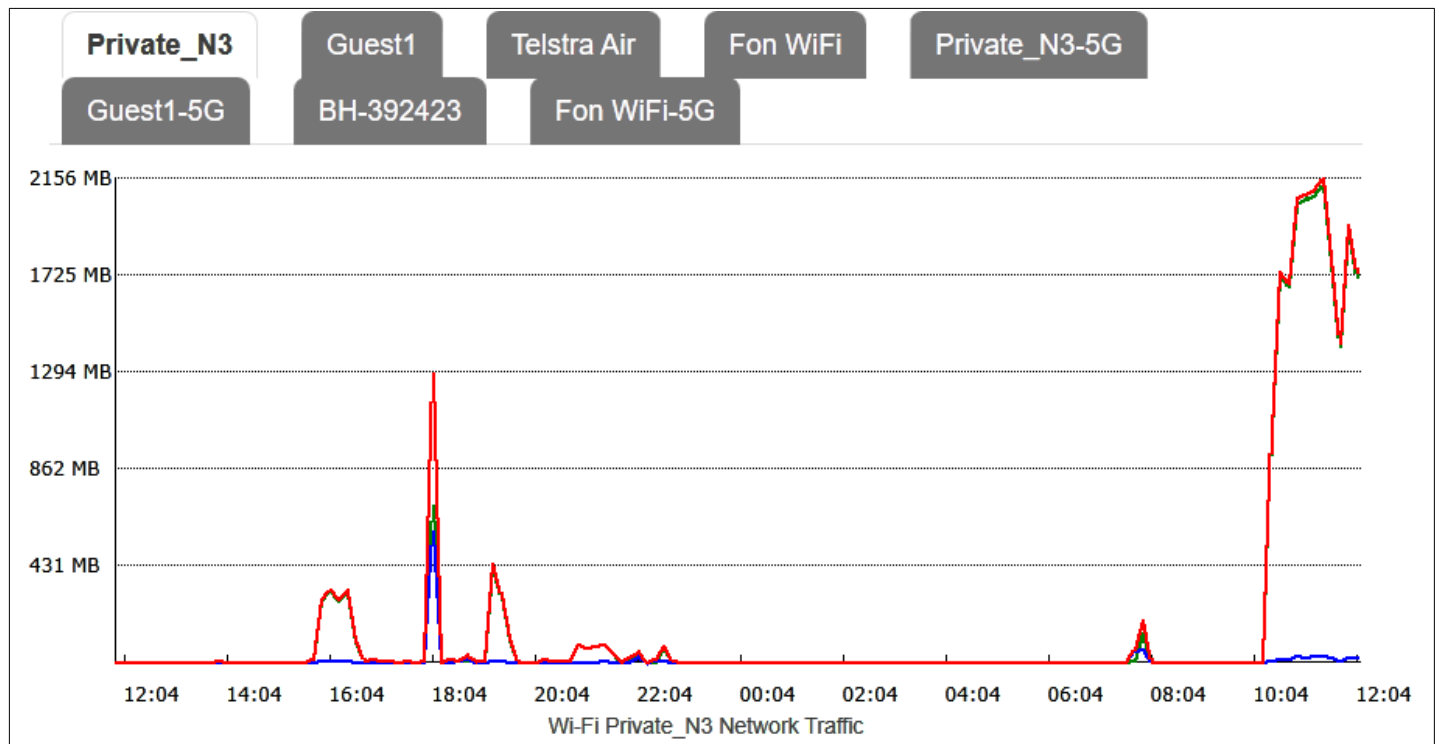

## 5G WiFi Band Traffic past 24 hours Graph

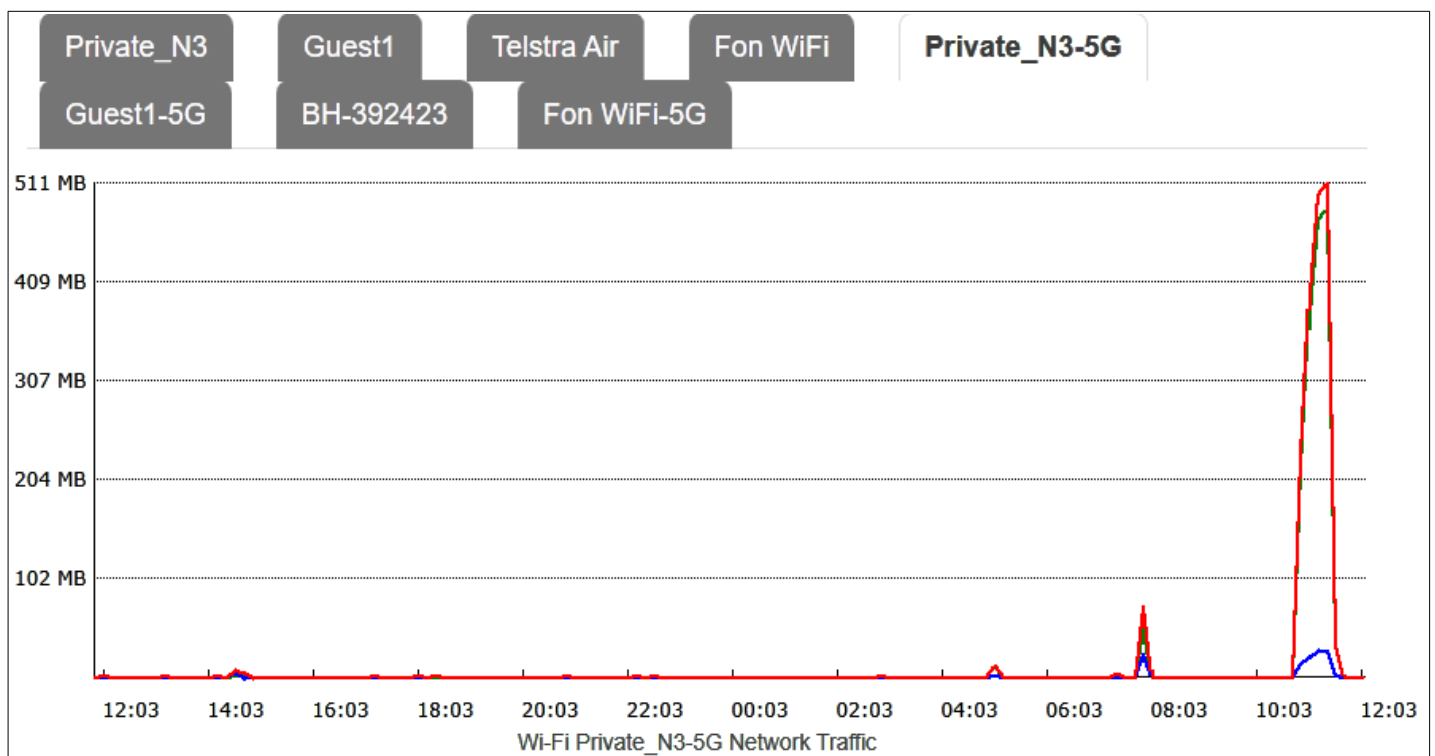

The traffic data figures are for the data transmitted and received since modem was rebooted.

The Internet data figures are for the connection currently in use. (DSL, WAN or LTE)

The data graphs show the rate of data transmitted or received over the last 24 hours. From what I can determine the data graph measure the bytes transmitted or received over a 10 minute period. The 10 minute periods start from when modem was last rebooted.

## 25. 4G Cellular Backup

Log into Modem and go to Advanced > Mobile >

For backup to work ensure “Enabled” is On.

The screenshot shows the 'Mobile' configuration page. At the top, there are tabs for 'Configuration', 'SIM', 'Diagnostics', and 'Profiles'. The 'Configuration' tab is selected. Below the tabs, the 'Device Status And Settings' section is visible. It contains a toggle for 'Enabled' which is checked and highlighted with a red box. Below this, the 'Device Status' is 'Disconnected' and the 'Access Technology' is 'LTE'. The 'Interfaces' section shows a table with one row: 'wwan' interface, 'default' linked profile, and 'Connect' status 'Off'. Below the table, the 'Interface wwan' section shows 'Status: Disconnected'. The 'Device Information' section lists various details: IMEI: 869970039098474, Manufacturer: Quectel, Model: EG06, Firmware Version: EG06AUTLLAR01A09V03M4G\_TCH, Hardware Version: EG06-AUTL\_R1.0, Temperature: 53.0 °C, and Power Mode: Online. A 'Close' button is at the bottom right.

| Interface | Linked Profile | Connect |
|-----------|----------------|---------|
| wwan      | default        | Off     |

| Interface | Linked Profile | Connect |
|-----------|----------------|---------|
| wwan      | default        | Off     |

When main link is down and working on 4G backup Device Status will change to Connected.

The screenshot shows the 'Mobile' configuration page, similar to the first one, but with the 'Device Status' changed to 'Connected', which is highlighted with a red box. The 'Enabled' toggle remains checked. The 'Access Technology' is still 'LTE'. The 'Antenna Selection' is set to 'Auto' and the 'Selected Antenna' is 'Internal'. The 'Interfaces' table and 'Interface wwan' section remain the same. A 'Close' button is at the bottom right.


| Interface | Linked Profile | Connect |
|-----------|----------------|---------|
| wwan      | default        | Off     |

| Interface | Linked Profile | Connect |
|-----------|----------------|---------|
| wwan      | default        | Off     |

# Diagnostics

Advanced > Mobile > Diagnostics

The radio signal quality can be viewed over a 5, 20 or 60 minute period.

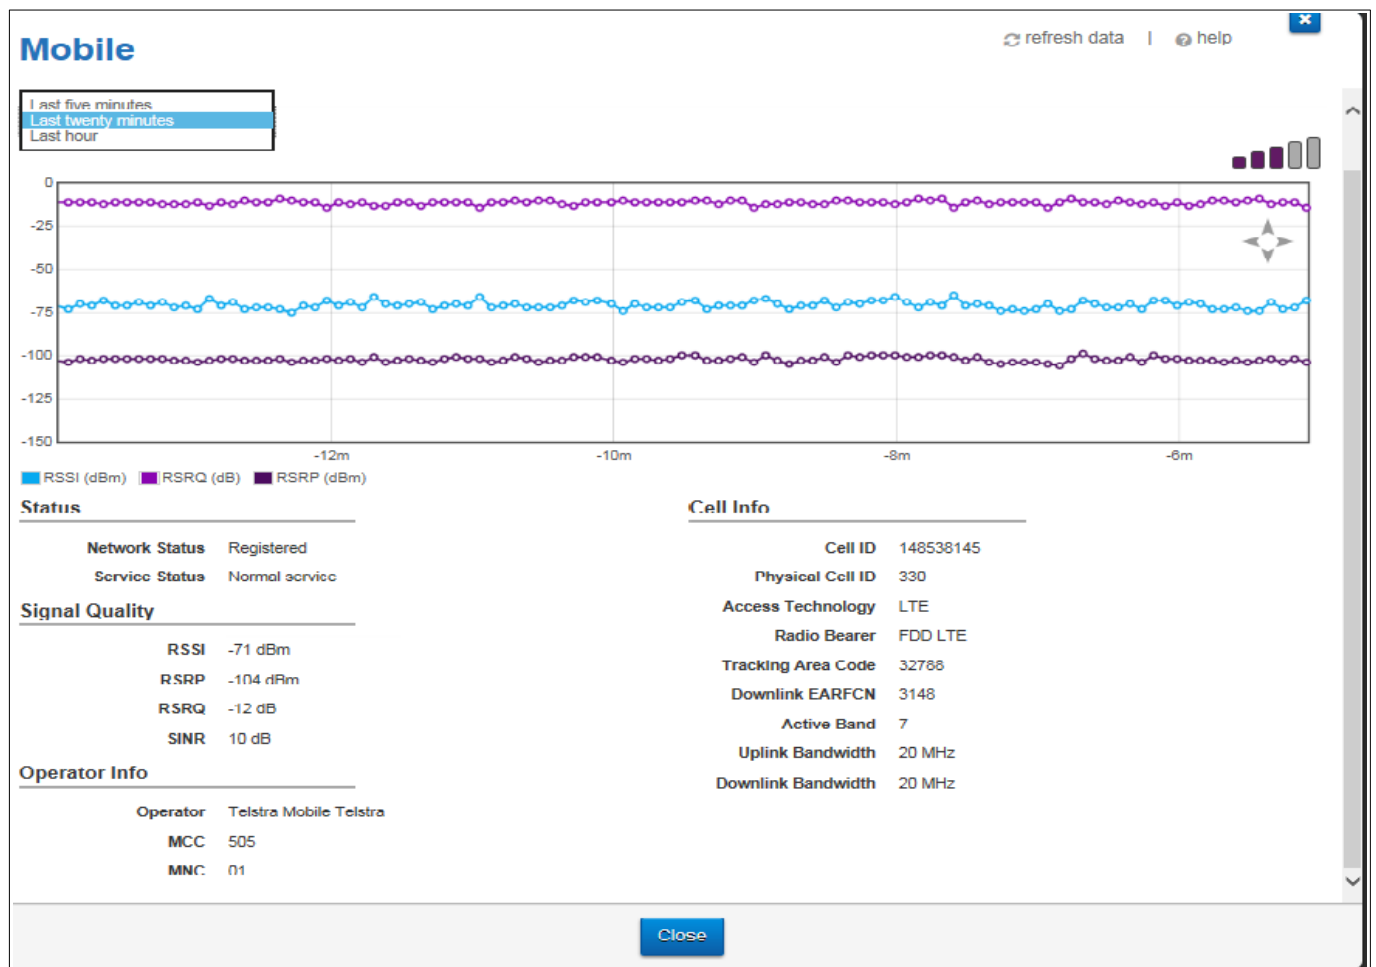

## GSM & 3G networks (RSSI)


- -50dBm to -75 dBm – High Signal (good voice and data)
- -76dBm to -90 dBm – Medium Signal (good voice and data)
- -91dBm to -100 dBm – Poor Signal (good voice data, marginal data with drop-outs)
- -101dBm to -109 dBm – Very poor Signal (voice may be OK, no data)
- -110dBm to -113 dBm – No signal

## 4G/LTE (RSRP)

- -70dBm to -90dBm is a strong signal with fast data speeds. Stronger signals are possible. **(Green)**
- -91dBm to -105dBm is a good signal with fast data speeds **(Green)**
- -106dBm to -112dBm is fair but useful and fast and reliable data speeds may be attained **(Orange)**
- -113dBm to -125dBm reliable data, but performance may be slower and latency increased **(Red)**
- -126dBm to -136dBm performance will drop dramatically
- -136dBm to -140dBm disconnection



If the mouse cursor is placed over an area of interest that area can be expanded by rotating mouse wheel. (See image below).

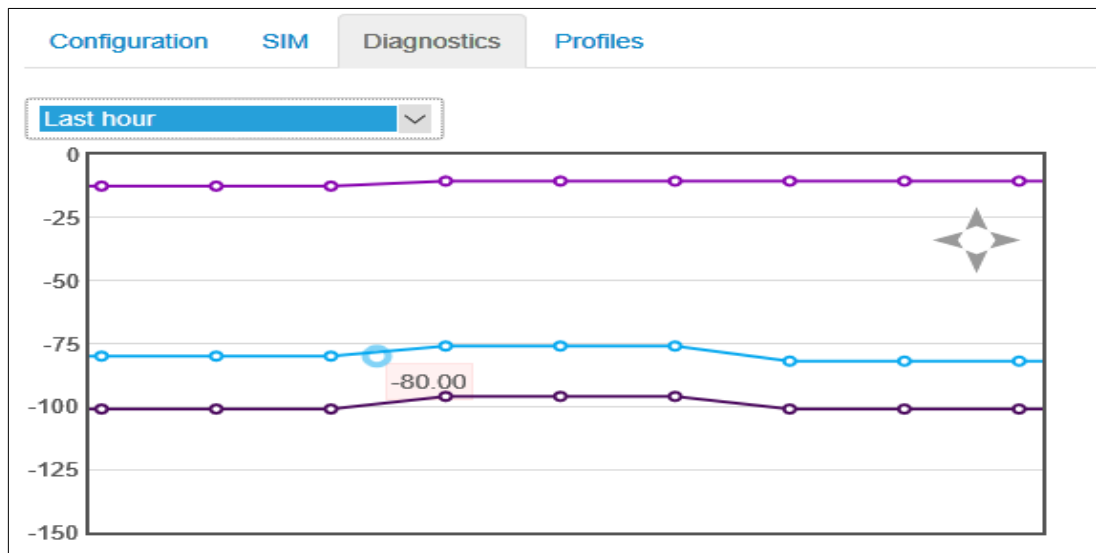

## Profiles

Advanced > Mobile > Profiles

Mobile

refresh data | help

Configuration

SIM

Diagnostics

Profiles

Profiles

| Name             | APN              | PDP Type | Username | Password | Authentication Type |
|------------------|------------------|----------|----------|----------|---------------------|
| default          |                  | IPv6     |          |          | None                |
| telstra.hybrid   | telstra.hybrid   | IPv4v6   |          |          | None                |
| telstra.internet | telstra.internet | IPv4v6   |          |          | None                |

Add new profile

By default the modem on has an IPv6 address on the WAN. This can cause problems with some devices. To fix this a new Profile that will also provide an IPv4 address can be set up.

Click on Add new profile.

Profiles

| Name             | APN              | PDP Type | Username | Password | Authentication Type |
|------------------|------------------|----------|----------|----------|---------------------|
| default          |                  | IPv6     |          |          | None                |
| telstra.hybrid   | telstra.hybrid   | IPv4v6   |          |          | None                |
| telstra.internet | telstra.internet | IPv4v6   |          |          | None                |
| Default IPv4v6   |                  | IPv4v6   |          |          | None                |

[Add new profile](#)

Enter a name, select IPv4v6 as PDP Type and select Add.

Configuration **SIM** Diagnostics Profiles

Device Status And Settings

Enabled ☒

Device Status: Disconnected

Access Technology: LTE

Interfaces

| Interface | Linked Profile | Connect |
|-----------|----------------|---------|
| wwan      | default        | Off     |

Edit

Go to the Configuration Tab, go to Interfaces and select edit

| Interface | Linked Profile | Connect |
|-----------|----------------|---------|
| wwan      | default        | Off     |

Interface wwan

default  
telstra.hybrid  
telstra.internet  
Default IPv4v6

Apply


Select the new Linked Profile created previously and select apply.

To use the modem as a 4G modem router with a normal Telstra Data SIM installed select the telstra.internet profile.

| Interface | Linked Profile   | Connect |
|-----------|------------------|---------|
| wwan      | telstra.internet | Off     |

## 26. Diagnostics (Fault Finding)

To view diagnostic information log in to modem and go to Advanced > Diagnostics

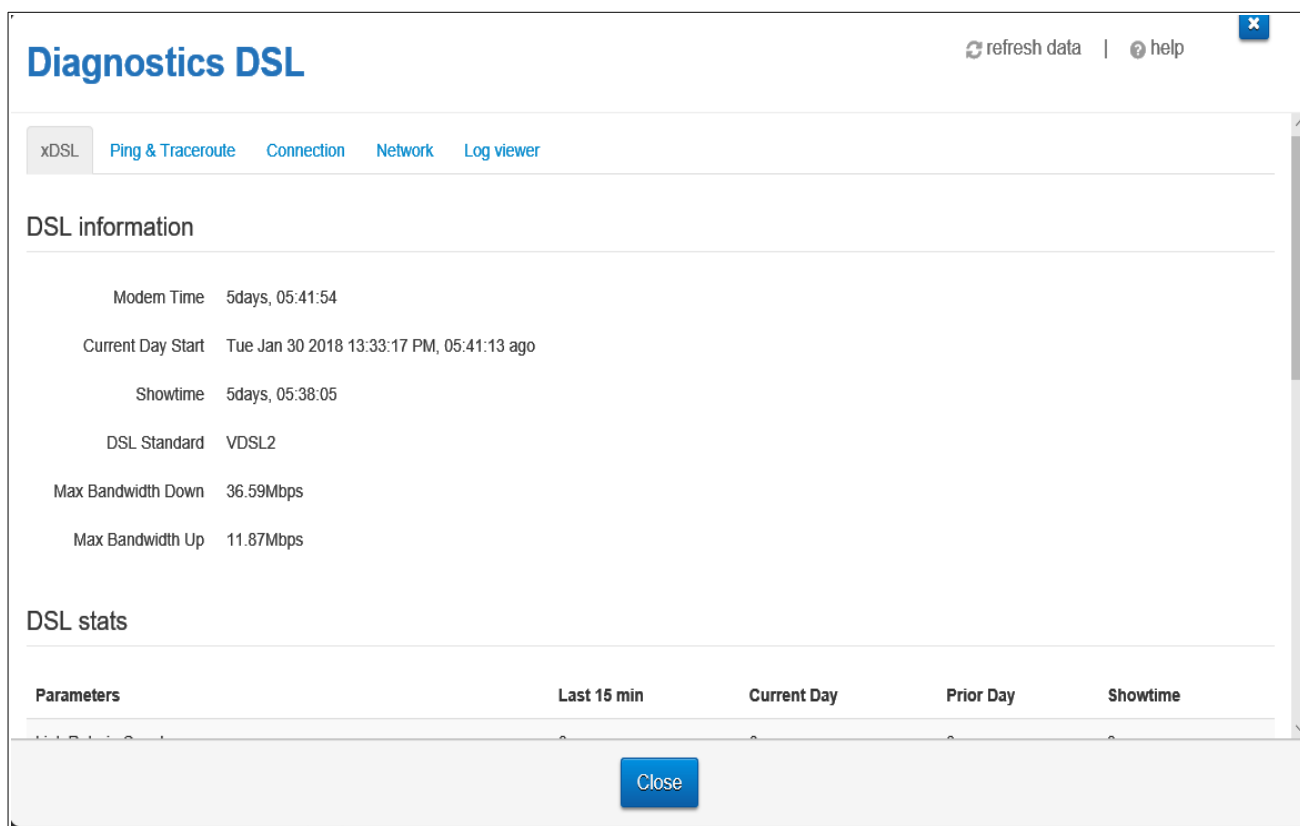

The screenshot shows the 'Diagnostics DSL' page. At the top, there's a header with 'Diagnostics DSL' and links for 'refresh data' and 'help'. Below the header is a navigation bar with tabs: 'xDSL', 'Ping & Traceroute', 'Connection', 'Network', and 'Log viewer'. The 'xDSL' tab is selected. The main content area is titled 'DSL information' and contains several key-value pairs: 'Modem Time' (5days, 05:41:54), 'Current Day Start' (Tue Jan 30 2018 13:33:17 PM, 05:41:13 ago), 'Showtime' (5days, 05:38:05), 'DSL Standard' (VDSL2), 'Max Bandwidth Down' (36.59Mbps), and 'Max Bandwidth Up' (11.87Mbps). Below this is a section titled 'DSL stats' with a table showing parameters for 'Last 15 min', 'Current Day', 'Prior Day', and 'Showtime'. A 'Close' button is at the bottom right.

| Parameters         | Last 15 min                               | Current Day | Prior Day | Showtime |
|--------------------|-------------------------------------------|-------------|-----------|----------|
| Modem Time         | 5days, 05:41:54                           |             |           |          |
| Current Day Start  | Tue Jan 30 2018 13:33:17 PM, 05:41:13 ago |             |           |          |
| Showtime           | 5days, 05:38:05                           |             |           |          |
| DSL Standard       | VDSL2                                     |             |           |          |
| Max Bandwidth Down | 36.59Mbps                                 |             |           |          |
| Max Bandwidth Up   | 11.87Mbps                                 |             |           |          |


### Ping

Advanced > Diagnostics > Ping & Trace Route

Enter a IP address or URL and click on “Send Ping Request”. A green Status tick indicates success.

### Trace Route

Advanced > Diagnostics > Ping & Trace Route and scroll down to Trace Route.

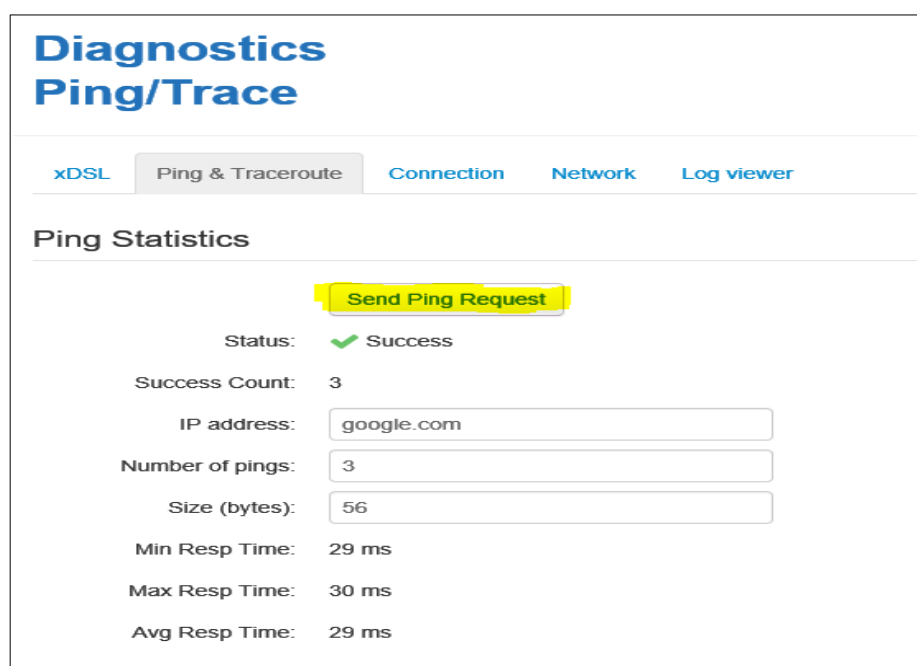

The screenshot shows the 'Diagnostics Ping/Trace' page. At the top, there's a header with 'Diagnostics Ping/Trace' and links for 'xDSL', 'Ping & Traceroute', 'Connection', 'Network', and 'Log viewer'. The 'Ping & Traceroute' tab is selected. The main content area is titled 'Ping Statistics' and contains a 'Send Ping Request' button. Below the button, the status is shown as 'Status: ✓ Success'. The 'Success Count' is 3. The 'IP address' field contains 'google.com'. The 'Number of pings' field contains '3'. The 'Size (bytes)' field contains '56'. The 'Min Resp Time' is 29 ms, the 'Max Resp Time' is 30 ms, and the 'Avg Resp Time' is 29 ms.

| Parameters      | Value      |
|-----------------|------------|
| Status          | ✓ Success  |
| Success Count   | 3          |
| IP address      | google.com |
| Number of pings | 3          |
| Size (bytes)    | 56         |
| Min Resp Time   | 29 ms      |
| Max Resp Time   | 30 ms      |
| Avg Resp Time   | 29 ms      |

Enter the IP address or URL and click on “Trace Route”.  
During the test the Status will show “Ongoing”

| Trace Route                                       |                 |            |          |
|---------------------------------------------------|-----------------|------------|----------|
| <div>Stop Trace Route</div>                       |                 |            |          |
| Status:                                           | * Ongoing       |            |          |
| IP address:                                       | telstra.com     |            |          |
| Max Hop Count:                                    | 30              |            |          |
| Size (bytes):                                     | 38              |            |          |
| Hostname                                          | IP              | Error code | RTT (ms) |
| *                                                 | *               | *          | *        |
|                                                   | 144.130.215.209 | 0          | 7,7,7    |
| bundle-ether8.fli-core1.adelaide.telstra.net      | 203.50.11.154   | 0          | 10,9,7   |
| bundle-ether9.win-core10.melbourne.telstra.net    | 203.50.11.91    | 0          | 16,16,16 |
| tengigabitethernet7-1.win22.melbourne.telstra.net | 203.50.80.162   | 0          | 15,15,15 |
| telstr745.lnk.telstra.net                         | 139.130.39.114  | 0          | 15,15,15 |

When Status shows Finished

All the hops are displayed and the latency between hops.

## Connection

Advanced > Diagnostics > Connections

Shows state of connections

## Diagnostics Connection

[xDSL](#)
[Ping & Traceroute](#)
[Connection](#)
[Network](#)
[Log viewer](#)

### Connection Check

Restart all Tests

Restart

DSL Status

Up

ATM Ping Test

PVC 8/35 Not all ping request were answered

IP Version 4 Address

58.174.49.224

IP Version 6 Address

No Address Assigned

Next Hop Ping

Success

First DNS Server Ping

Success

Second DNS Server Ping

Success

## LAN, WAN port and WLAN Statistics

Log in to modem and go to Advanced > Diagnostics > Network

### Diagnostics

help

[xDSL](#) [Ping & Traceroute](#) [Connection](#) **Network** [Log viewer](#)

#### Ports state

Type supported

  
Not connected

  
Not connected

  
Not connected

  
Not connected

  
Not connected

#### Network Statistics

| Interface | Rx Bytes  | Tx Bytes   | Rx Packets | Tx Packets | Rx Errors | Tx Errors |
|-----------|-----------|------------|------------|------------|-----------|-----------|
| Port 1    | 51341856  | 808198986  | 365567     | 616101     | 0         | 0         |
| Port 2    | 14566972  | 43650226   | 59062      | 49554      | 0         | 0         |
| Port 3    | 149801188 | 4026862469 | 1428056    | 2746278    | 0         | 0         |
| Port 4    | 47171130  | 949493632  | 356278     | 716854     | 0         | 0         |

Close

## DSL link status

Log in to modem and go to advanced > Broadband > DSL link status

**DSL link status** [Ethernet link status](#) [DSL Diagnostics](#)

DSL Status

Up

DSL Uptime

4 days 7 hours 4 minutes 5 seconds

DSL Type

VDSL2

DSL Mode

Fast

Maximum Line rate

⬆ 12.55 Mbps ⬆ 37.73 Mbps

Line Rate

⬆ 12.19 Mbps ⬆ 37.93 Mbps

Data Transferred

⬆ 1398.99 MBytes ⬇ 2511.94 MBytes

Output Power

⬆ 7.9 dBm ⬇ 14.4 dBm

Line Attenuation

⬆ 7.0, 43.6, 65.8 dB ⬇ 18.6, 55.6, 82.4 dB

Noise Margin

⬆ 7.8 dB ⬆ 5.8 dB

Maximum Line rate is the maximum speed the link is capable of and is limited by the physical characteristics of the line.

Line Rate is the actual speed data is transferred. The line rate can not be faster than maximum Line rate but can be less due to speed limitations on your connection. Example Maximum line rate might be 98 Mbps but if you are on NBN 50 plan Line rate will be 62 Mbps and if Maximum line rate is 36 Mbps and you are on NBN 50 plan Line rate would be 36 Mbps

Line Attenuation is the amount the signal gets decreased due to the attenuation of the line. There are several values as the attenuation increases with frequency. The greater the attenuation the lower the maximum speed.

Noise Margin is the margin between the received signal and the signal to noise ratio at which the signal can no longer be accurately decoded. Normally 6dB but can be higher if noise profile has been implemented.

## Statistics for VDSL or ADSL connection

Log into modem and go to Advanced > Broadband > DSL Diagnostics

| Diagnostics DSL                   |             |             |           |               |
|-----------------------------------|-------------|-------------|-----------|---------------|
|                                   |             |             |           |               |
| DSL stats                         |             |             |           |               |
| Parameters                        | Last 15 min | Current Day | Prior Day | Showtime      |
| Link Retrain Count                | 0           | 0           | 0         | 0             |
| Sync Bandwidth(Down/Up)           | -           | -           | -         | 37.93M/12.19M |
| Loss of Sync,LOS(Local/Remote)    | 0/0         | 0/0         | 0/0       | 0/0           |
| Loss of Framing,LOF(Local/Remote) | 0/0         | 0/0         | 0/0       | 0/0           |
| Loss of Margin,LOM(Local/Remote)  | 0/0         | 0/0         | 0/0       | 0/0           |
| Forward Error Correction,FEC      | 6057/5364   | 18/131      | 6057/5364 | 12111/23796   |
| Cyclic Redundancy Correction,CRC  | 0/0         | 0/0         | 0/1       | 0/3           |
| Errored Seconds,ES                | 0/0         | 0/0         | 0/1       | 0/3           |
| Severely Errored Seconds,SES      | 0/0         | 0/0         | 0/0       | 0/0           |
| Unavailable Seconds,UAS           | 0/0         | 0/0         | 0/0       | 0/0           |

Above is an example of a normal DSL link

1. Link Retrain count: Number of times link has had to disconnect to re-synchronise.
2. Sync Bandwidth (Down/Up): Speed of link Mega bits per second (Mbps)
3. Loss of Sync, LOS (Local / Remote) Number of times Node or modem has lost sync
4. Loss of Framing, LOF (Local / Remote): Number of times there has been a loss of frame error.
5. Loss of Margin, LOM (Local / Remote): Number of times Signal to noise margin is too small for


signal to be accurately detected due to high noise or high attenuation.

6. Forward Error Correction, FEC: Number of errors that were detected and corrected.
7. Cyclic Redundancy Correction, CRC: A CRC error indicates that part of the data packet is corrupt and requires retransmission.
8. Errored Seconds, ES: The number of seconds during which an CRC error was detected
9. Severely Errored Seconds SES: The number of seconds during 30% or more of the data blocks had CRC errors
10. Unavailable Seconds UAS: The number of seconds the link was unable to transmit. Usually indicate loss of the link.

Below is an example of a DSL link suffering frequent dropouts.

| Diagnostics DSL                   |             |             |           |            |
|-----------------------------------|-------------|-------------|-----------|------------|
| refresh data   help               |             |             |           |            |
| DSL stats                         |             |             |           |            |
| Parameters                        | Last 15 min | Current Day | Prior Day | Showtime   |
| Link Retrain Count                | 0           | 13          | 0         | 0          |
| Sync Bandwidth(Down/Up)           | -           | -           | -         | 4.4M/0.74M |
| Loss of Sync,LOS(Local/Remote)    | 0/36        | 0/136       | 0/0       | 0/1        |
| Loss of Framing,LOF(Local/Remote) | 0/36        | 0/136       | 0/0       | 0/1        |
| Loss of Margin,LOM(Local/Remote)  | 0/32        | 0/92        | 0/0       | 0/3        |
| Forward Error Correction,FEC      | 0/0         | 3/3207      | 0/0       | 0/124118   |
| Cyclic Redundancy Correction,CRC  | 0/6945      | 0/27627     | 0/0       | 0/1042     |
| Errored Seconds,ES                | 0/255       | 0/1386      | 0/0       | 0/70       |
| Severely Errored Seconds,SES      | 0/133       | 0/537       | 0/0       | 0/17       |
| Unavailable Seconds,UAS           | 190/290     | 863/1273    | 0/0       | 0/0        |
| Close                             |             |             |           |            |

## DSL Bit Loading

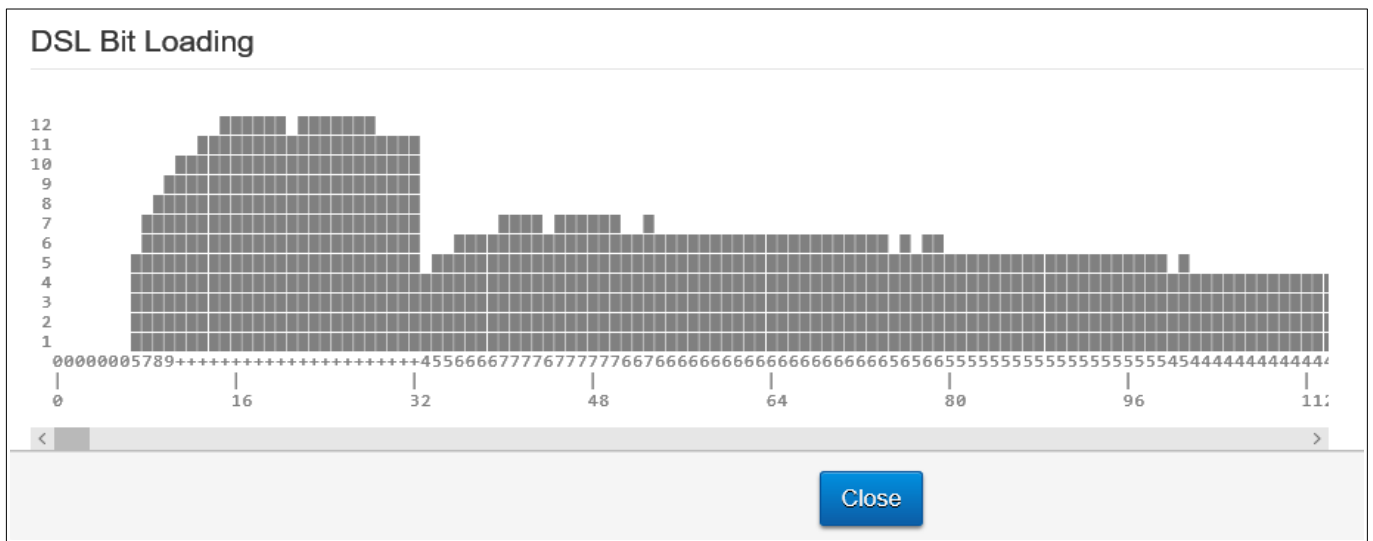


The frequency bandwidth of the link is divided into tones of 4.3125 KHz bandwidth.

The tones are displayed along the horizontal axis.

Each tone can carry up to 56kbps of data.

On a perfect line each tone would carry 56kbps of data at lower frequencies. As the frequency increases the number of bits per second will gradually decrease.

If there is noise on the line at a particular frequency the bits per tone will be less at that frequency as indicated in image below.

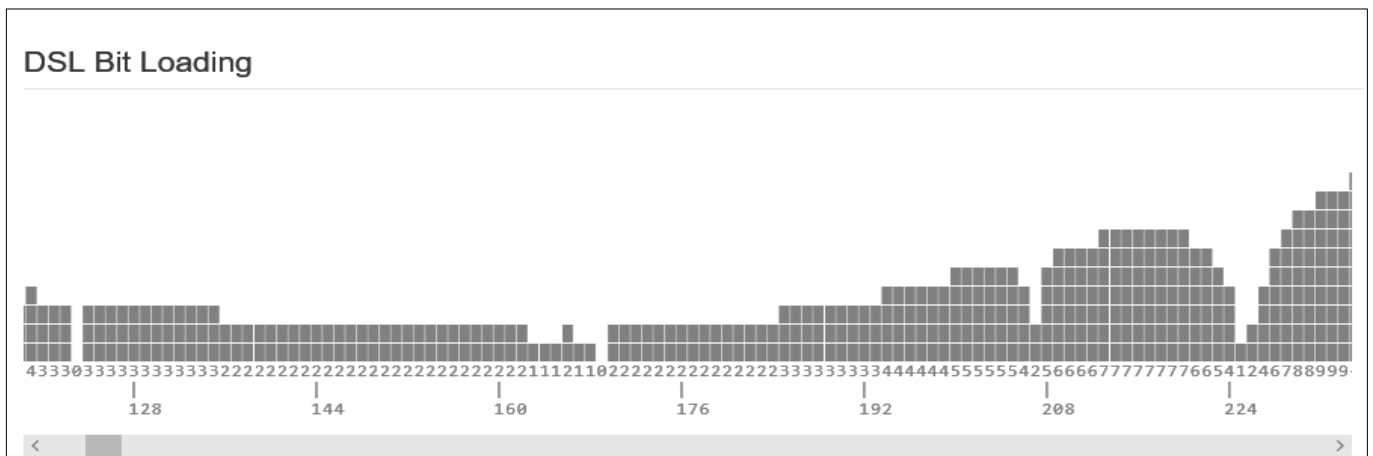

## Log

The log shows events that have occurred in the last 15-50 minutes

The filter can be used to show all events or only those of a particular type.

Event Log

refresh data | help

xDSL

Ping & Traceroute

Connection

Network

Log viewer

Filter

Everything

Export All

| Date            | Facility      | Message                                                                                                                                                                                |
|-----------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Jan 30 18:50:12 | daemon.info   | registration state changed to: registered                                                                                                                                              |
| Jan 30 18:50:00 | cron.info     | 62 cmd /sbin/trafficmon.lua                                                                                                                                                            |
| Jan 30 18:50:00 | cron.info     | 61 cmd /usr/bin/thermalProtection                                                                                                                                                      |
| Jan 30 18:49:57 | daemon.notice | Idle-Main.check(timeout, 1)                                                                                                                                                            |
| Jan 30 18:49:54 | user.info     | mmpbxd[19269] SIP Registration: SIP: 192.168.1.100: Register Success                                                                                                                   |
| Jan 30 18:49:54 | user.debug    | [MMRVSIPIPL::NETWORKOBJ]:C: onStackLogEvent:1936 - TRANSACTION - RvSipTransactionSetLocalAddress Transaction 0x0x570010, Failed to sel local address to transmitter 0x0x529008 (rv=-3) |

All the events for past 80 hours can be exported as a text file by clicking on the “Export all” button.

By default the file is downloaded to the default download folder as log.txt

File name: log.txt

Save as type: Text Document (\*.txt)

Save

Cancel

What do you want to do with log.txt?

From: 192.168.178.1

Open

Save

Cancel

## Extract from log at beginning of link loss

```

Tue Oct 23 09:46:38 2018 daemon.notice netifd: Network device 'ptm0' link is
down
Tue Oct 23 09:46:38 2018 daemon.notice netifd: Interface 'wan6' has link
connectivity loss
Tue Oct 23 09:46:38 2018 daemon.debug ledfw[1640]: setting device_name to
eth4
Tue Oct 23 09:46:38 2018 daemon.debug ledfw[1640]: setting mode to link
Tue Oct 23 09:46:38 2018 daemon.info odhcpd[3376]: Raising SIGUSR1 due to
default route change
Tue Oct 23 09:46:38 2018 daemon.notice netifd: Interface 'wan' has link
connectivity loss
Tue Oct 23 09:46:38 2018 daemon.info odhcpd[3376]: Raising SIGUSR1 due to
address change on wll_1
Tue Oct 23 09:46:39 2018 daemon.notice miniupnpd[30444]:
ProcessInterfaceWatchNotify RTM_DELADDR index=19 fam=2
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: applying action on
internet:green
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: writing to
/sys/class/leds/internet:green with action none
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: setting brightness to 0
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: applying action on

```

```
internet:red
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: writing to
/sys/class/leds/internet:red with action none
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: setting brightness to 0
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: applying action on
internet:blue
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: writing to
/sys/class/leds/internet:blue with action none
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: setting brightness to 0
```

## **Example of events to look for during loss of internet connections**

### **Start of loss off internet.**

```
Tue Oct 23 09:46:38 2018 daemon.notice netifd: Interface 'wan' has link connectivity loss
```

### **Online light goes off**

```
Tue Oct 23 09:46:39 2018 daemon.debug ledfw[1640]: applying action on internet:red
```

### **Online light purple**

```
Tue Oct 23 09:48:50 2018 daemon.notice netifd: Interface 'wwan_6' has link connectivity
```

**Link light green** (This is for DSL connection will be different for connections using modem's WAN port)

```
Tue Oct 23 09:51:18 2018 kern.warn kernel: [661451.751000] bcmxtmcfg: Connection UP,
LinkActiveStatus=0x1, US=12439000, DS=38565000
```

### **Online light green** (Internet reconnected end of outage)

```
Tue Oct 23 09:51:23 2018 daemon.debug ledfw[1640]: applying action on internet:green
```

```
Tue Oct 23 09:51:33 2018 daemon.notice netifd: Interface 'wan' is now up
```

### **Phone light green** (Phone service reconnected)

```
Tue Oct 23 09:51:46 2018 user.info mmpbxd[11841]: SIP Registration: SIP: +61xxxxxxxxx : Register
Success
```

## 27. Change IP Address of Modem

Go to Advanced > Local Network

LAN INTERFACES

- lan
- Guest1
- Guest1\_5GHz

### Global Information

Local Device IP address: 192.168.178.1

Local Network subnet: 255.255.255.0

IPv4 Primary DNS: Telstra

IPv4 Secondary DNS:

IPv6 state: ON

IPv6 Prefix: 2001:8003:a886:b600::1/64

IPv6 Primary DNS:

IPv6 Secondary DNS:

### Static leases

| Hostname | MAC address | IP |
|----------|-------------|----|
|----------|-------------|----|

Cancel Save

### DHCP Settings

DHCP Server: ON

Network address: 192.168.178.0

DHCP Start address: 192.168.178.2

DHCP End address: 192.168.178.254

Lease time: 1h

To change the IP address off Modem for LAN and normal WiFi access points select LAN as interface.

Type in New IP Address,

Change the DHCP Start and End address so that in same subset as Modems IP address. (First three group of integers are the same.

Click on Save.

Disconnect and reconnect to modem and log in using modem's new IP address.

Note: Cannot use 192.168.2.1 as this is address range of guest network.

The Guest networks IP address can also be change by select the guest network you wish to change.

Local Network

LAN INTERFACES

- lan
- Guest1
- Guest1\_5GHz

### Global Information

Local Device IP address: 192.168.2.126

Local Network subnet: 255.255.255.128

IPv6 state: OFF

### DHCP Settings

DHCP Server: ON

Network address: 192.168.2.0

DHCP Start address: 192.168.2.1

DHCP End address: 192.168.2.125

Lease time: 1h

## 28. Modem's Firmware Software

To check Firmware log in to modem and go to Advanced > Modem

The Firmware / Software can not be updated manually. When a new Firmware / Software becomes available it is pushed out to the Modem between Midnight and 6.00am. The Modem must be connected during this period to receive any Firmware / Software update.

**Modem**

Global Information

|                  |                                |                  |                          |
|------------------|--------------------------------|------------------|--------------------------|
| Product Vendor   | Technicolor                    | Restart Device   | <a href="#">Restart</a>  |
| Product Name     | Technicolor DJA0231            | Factory Defaults | <a href="#">Reset</a>    |
| Software Version | 18.1.c                         | Retain Contacts  | <input type="checkbox"/> |
| Firmware Version | 18.1.c.0384-950-RB             |                  |                          |
| Hardware Version | VCNT-A                         |                  |                          |
| DSL Version      | A2pvfbH043k.d26t               |                  |                          |
| Serial Number    | CP19                           |                  |                          |
| MAC Address      | 20                             |                  |                          |
| Uptime           | 18 hours 20 minutes 27 seconds |                  |                          |
| System Time      | 2019-10-23 21:35:40            |                  |                          |
| Network Timezone | <input type="checkbox"/>       |                  |                          |

[Close](#)

**18.1.c.0241-950-RA** First Maintenance Firmware. Bug fixes and a couple of minor features.

- Option to not delete contacts on factory reset
- IPv6 continuity between basic and advanced DYNDNS GUI's (basic view wasn't allowing ipv6)
- Front light rendering fix
- Fix for DynDNS getting stuck 'updating'
- Fix for some special characters not being accepted when changing management p/w
- Fix for incorrect Guest WiFi MAC address being displayed
- Fix for DECT codec, now is correctly G.726
- Fix for duplicate time of day rule being created in basic view

**18.1.c.0283-950-RA** April 2019

- Time of Day Rule's mini overhaul/improvements
- Further VoLTE fixes
- Lan DHCP fix from previous issue fully implemented into the FW
- WAN Supervision/Sensing improvements
- Printer sharing should be working properly
- Front LED will now be green in bridged mode
- Exploit Fix

### **18.1.c.0347-950-RC 13<sup>th</sup> June 2019**

- Main fix is enabling integration with the Gen 2 Boosters
- Some IPv6 fixes and not much else

### **18.1.c.0384-950-RB 20<sup>th</sup> August 2019**

- DECT Fix
- Time of Day GUI improvements
- Able to select from multiple DNS servers
- Expansion on special characters allowed for management passwords
- Basic UI DDNS Fixes
- IPv6 traceroute fix
- Front LED logic fixes for PPP failed auth attempts (no longer stays green)
- Several exploit fixes
- Several LTE/Voip/VoLTE bug fixes

### **18.1.c.0443-950-RA 10<sup>th</sup> November 2019**

- DSL Firmware/Driver update
- Missed calls incorrectly reported for some types of phones when VMWI message received fix
- FW should allow user to disable DECT (including emissions)
- Advanced GUI should now show ipv6 DNS servers
- 2.4 channel width set to auto by default
- Cannot create parent control rule fix
- Time of day rule duplication fix
- fix for invalid sites being being saved in parental controls
- Port forward rule should no longer have destination MAC empty
- Apple WiFi instability issue fix
- reduction in some log spam
- some continuity fixes between basic and advanced pages
- Several Booster GUI fixes
- VOIP Fixes
- Length metadata for audio and video files fix
- Samsung smart TV wifi fix
- BFD enable/disable should now be working correctly
- ping/traceroute on ipv6 LTE should now work correctly

### **18.1.c.0443-950-RB 10<sup>th</sup> December 2019**

- Same as **18.1.c.0443-950-RA** without the software that cause 2.4 GHz WiFi problems.

### **18.1.c.0462-950-RB 21<sup>th</sup> February 2020**

- Fix for Log viewer freezing
- Telstra Air fix (Too many devices connected error)
- Traffic Graphs fix for DSL Internet graph recording incorrectly

### **18.1.c.0514-950-RB 21<sup>th</sup> July 2020**

Main new feature was extra WiFi security Protected Management Frames (PMF) added.

### **18.1.c.0543-950-RA September 2020**

Main new feature Game Optimiser added.

## 29. Modem's Time Settings

To change Modem's time settings log in to modem and go to Advanced > Modem and scroll down to Network time zone.

**Modem**

refresh data | help

Uptime

System Time

Network Timezone

Current Timezone

Led Level

NTP servers

Asia/Yakutsk

Asia/Yekaterinburg

Asia/Yerevan

Atlantic/Azores

Atlantic/Bermuda

Atlantic/Canary

Atlantic/Cape Verde

Atlantic/Faroe

Atlantic/Madeira

Atlantic/Reykjavik

Atlantic/South Georgia

Atlantic/St Helena

Atlantic/Stanley

Australia/Adelaide

Australia/Brisbane

Australia/Broken Hill

Australia/Currie

Australia/Darwin

Australia/Eucla

Australia/Hobart

Australia/Lindeman

Australia/Lord Howe

Australia/Melbourne

Australia/Perth

Australia/Sydney

Europe/Amsterdam

Europe/Andorra

Europe/Athens

1.au.pool.ntp.org

2.au.pool.ntp.org

Cancel Save

By default Network Timezone is ticked. The time zone is set automatically to time zone of Telstra server.

To set Time zone manually remove tick, select required time zone from Current Time zone selection box and click on save.

## 30. Connecting USB printer.


USB printer can be connected to USB port on the Modem and can be accessed from devices connected to by LAN or WiFi to the modem.

Plug the USB printer into the USB port on the Modem.

Log into Modem and go to Advanced > Printer Sharing


If printer is recognised its name will be displayed under Product Name.

Make sure Enabled is ticked.

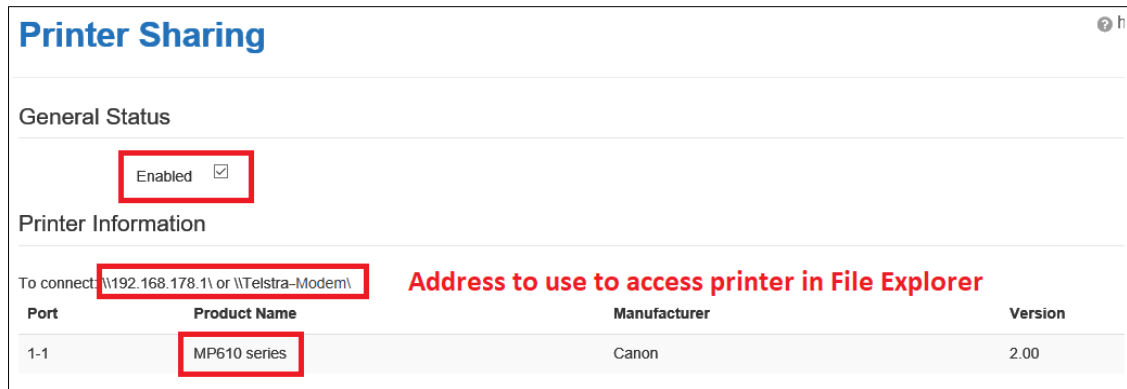


On a Windows PC open File Explorer and go to Networks.

Telstra-Modem Should be listed as a computer.

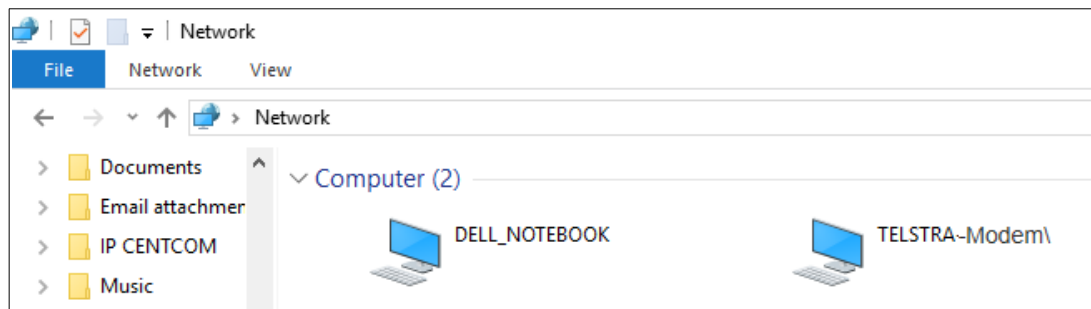

Double click on Telstra-Modem.

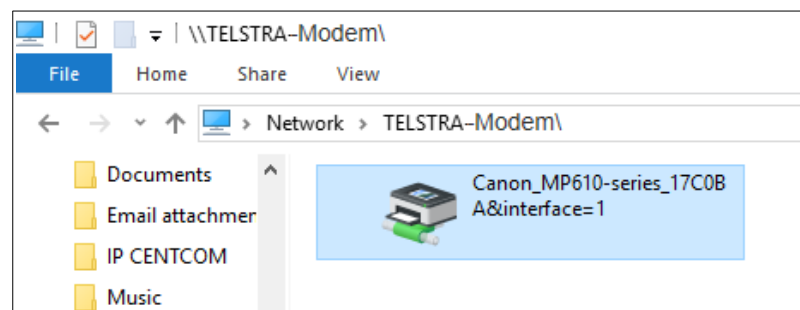

Your printer will be displayed.

Double click on the printer.


You will be prompted to install the device.

Click OK.

The printer probably want be recognised but you can install driver manually using Windows update, a disc or by selecting from a list of printers.

# 31. WiFi Tools

The modem has a set of WiFi Tools for monitoring WiFi devices and the strength of neighbouring networks. To access these tools go to Advanced > Wireless

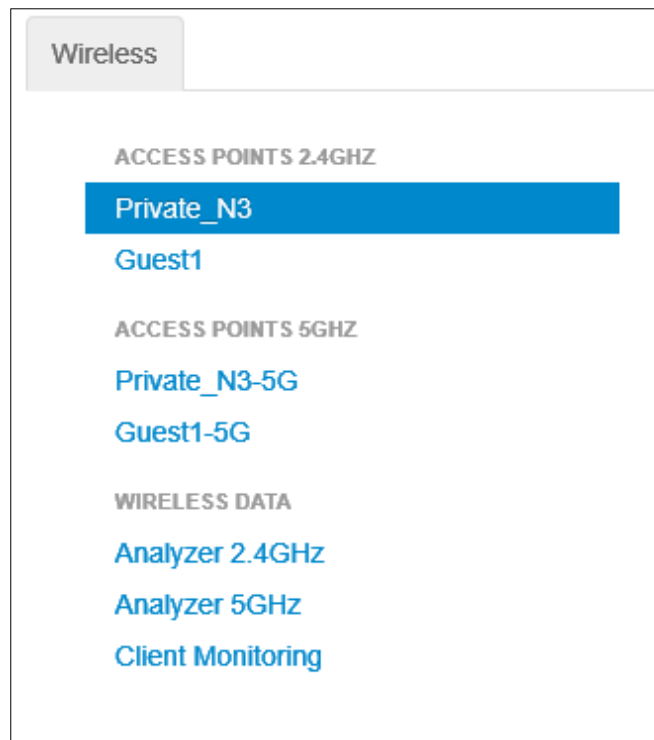


## 1. Analyser 2.4GHz

If you use this tool, devices connected will be disconnected and will be able to connect after 1 minute.

To refresh scan select Re-Scan button and select accept.

Below the graph is a list of WiFi networks showing channel and power level.

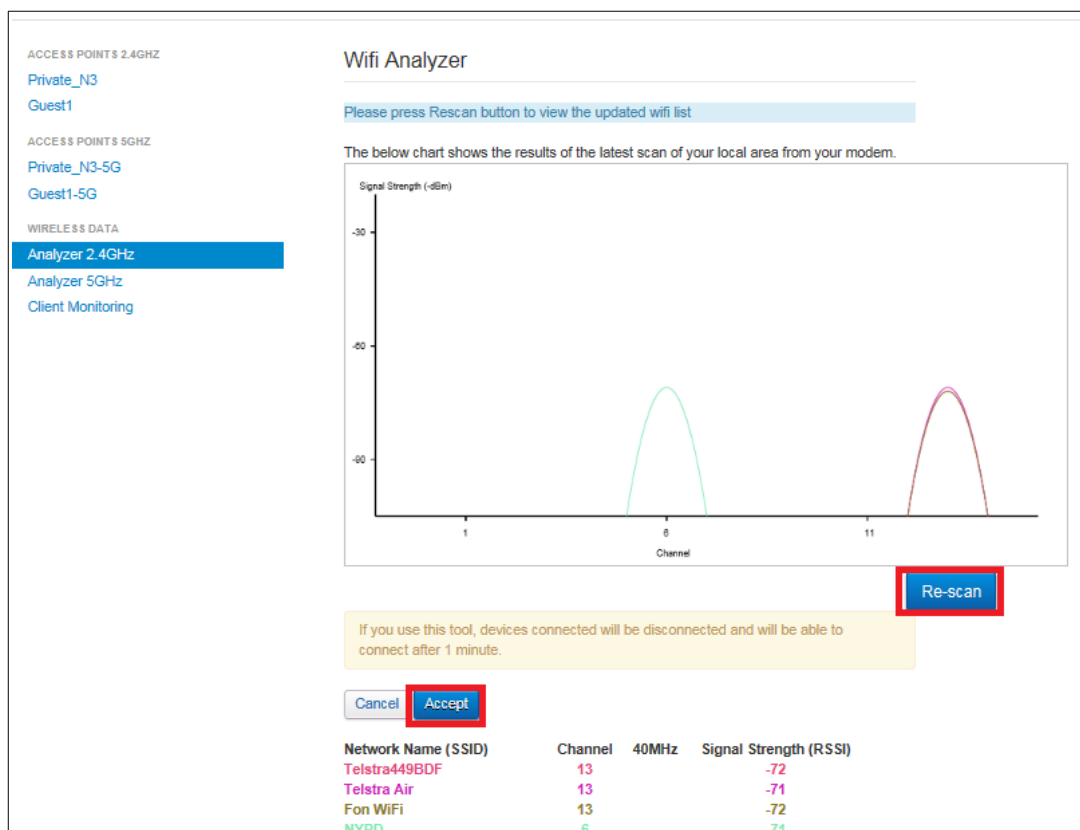


## 2. Analyser 5GHz

If you use this tool, devices connected will be disconnected and will be able to connect after 1 minute.

To refresh scan select Re-Scan button and click on accept.

Below the graph is a list of WiFi networks showing channel and power level.

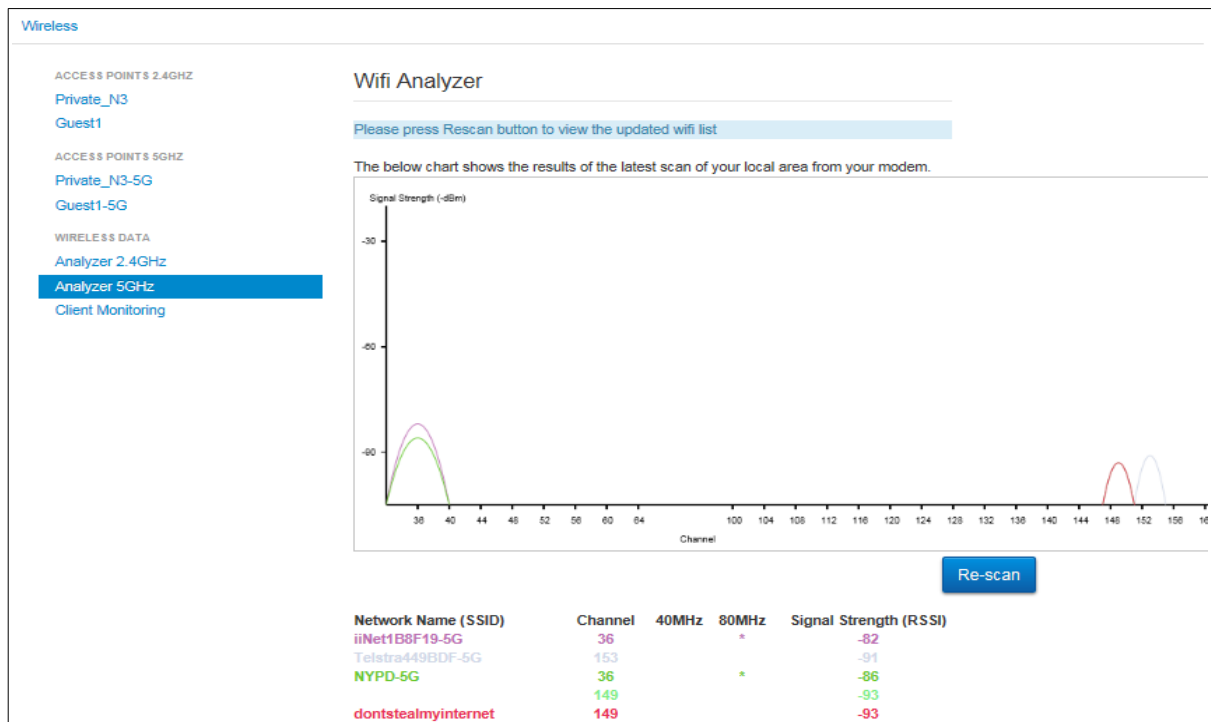

## 3. Client Monitoring

Select WiFi Device from drop down list.

### Wireless Client Monitor

Selection

Choose Device

Refresh List

Refresh

Device Details

All information is given from the Client perspective

Host Name: ad

Frequency: 5GHz

SSID: Privt .5G

MAC Address: 24:1

Device Capabilities: 802.11ac 2x2 WMM 40MHz 80MHz SGI20 SGI40 SGI80 AMPDU LDPC TXBF AMSDU AMSDU\_IN\_AMPDU 11V\_S 11K 11K\_BRP 11K\_BRA

Active: Powersave WMM 80MHz AMPDU LDPC TXBF

RSSI: -100dBm to -43dBm

PHY Rate: 780 Mbps @ 24 Mbps

Packets Sent: 16551

Packets Received: 38757

Retransmissions: 19

Time Connected: 23 hours 4 minutes 39 seconds

Current Time: 2019-10-24 11:42:32

Red Poor modem received WiFi signal  
Orange Ok modem received WiFi  
Green Good modem received WiFi Signal

Close Return

The Client Monitor is a very useful tool for monitoring the quality of the WiFi link between the modem and the WiFi device. It displays the following information.

## Wireless Client Monitor

### Device Details

All information is given from the Client perspective

Host Name Dell-Notebook

Frequency 2.4GHz


SSID Priv

MAC Address 94:

Device Capabilities 802.11n 1x1 WMM SGI20 AMPDU

Active WMM AMPDU

Power Transitions 511

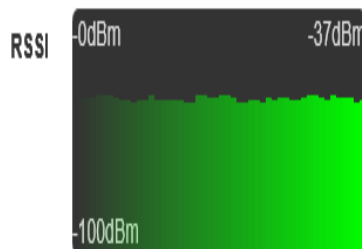

PHY Rate 39 Mbps 52 Mbps

Data Rate 36 Kbs 9 Kbs

Packets Sent 2281937

Packets Received 1800450

Retransmissions 560


Time Connected 4 hours 59 minutes 38 seconds

Current Time 2019-10-26 20:26:31

1. **Host Name:** Name of WiFi device.
2. **Frequency:** Current WiFi Frequency Band used by device
3. **MAC address** of WiFi Device
4. **Device Capabilities.**
5. **Active:** Capability being used
6. **Power Transitions** (2.4 GHz WiFi Band only)
7. **RSSI:** Graph of RSSI of modem's received WiFi signal from WiFi device which is dynamically updated. The lower the RSSI the better the signal strength.
8. **Phy Rate:** The speed of the WiFi link between modem and device. These speeds are dynamically updated.
9. **Data Rate:** (2.4 GHz WiFi Band only): The speed of the data transmitted over the WiFi link. The speeds are dynamically updated,.
10. **Packets sent:** Packets sent by device. The packets are not updated dynamically
11. **Packets Received:** Packets received by device. The packets are not updated dynamically
12. **Retransmissions:** These are similar to CRC errors on a DSL link. The packet has to be retransmitted because it either did not arrive or had too many errors for the inbuilt error correction bits to correct.
13. **Time Connected:** Time the WiFi device has been continuously connected to the modem.
14. **Current Time** Shows time when WiFi device was selected. Does not update.


## 32. DNS Selection

By default the modem uses Telstra as the DNS but has the option to select other DNS providers from a drop down list. To use a non Telstra DNS log into the modem and go to Advanced > Local Network.

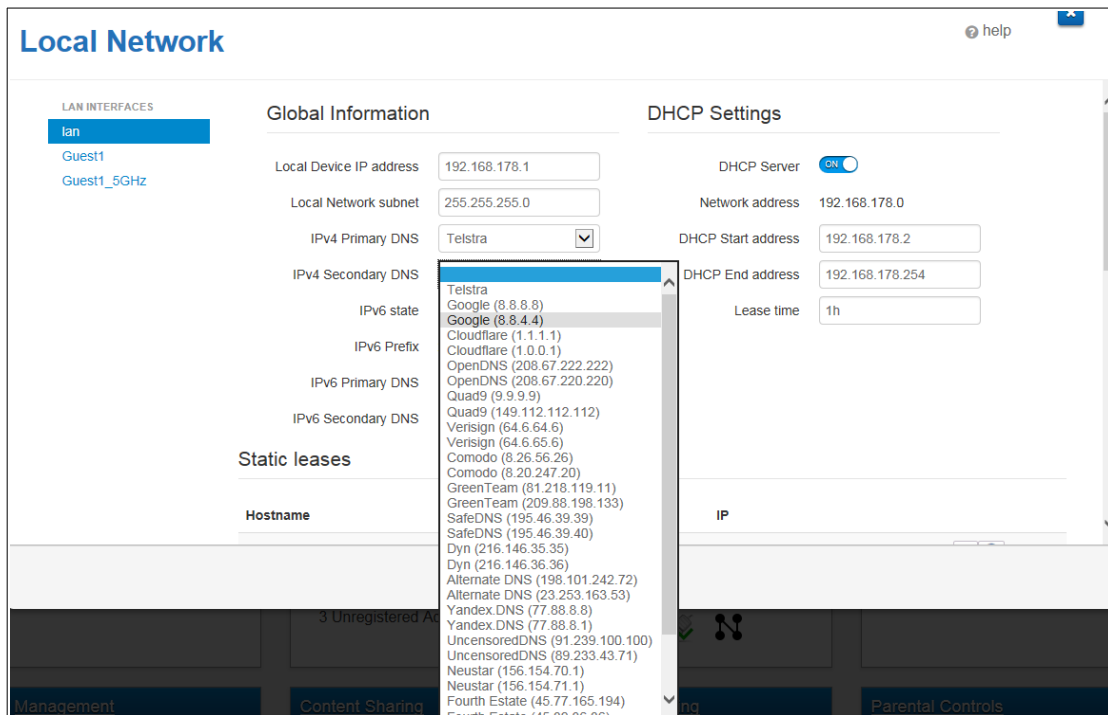

The screenshot shows the 'Local Network' configuration page. On the left, under 'LAN INTERFACES', 'lan' is selected. The 'Global Information' section contains fields for 'Local Device IP address' (192.168.178.1), 'Local Network subnet' (255.255.255.0), 'IPv4 Primary DNS' (Telstra), 'IPv4 Secondary DNS' (Telstra), 'IPv6 state' (OFF), 'IPv6 Prefix', 'IPv6 Primary DNS', and 'IPv6 Secondary DNS'. A dropdown menu is open for the 'IPv4 Primary DNS' field, displaying a list of DNS providers including Telstra, Google (8.8.8.8), Google (8.8.4.4), Cloudflare (1.1.1.1), OpenDNS (208.67.222.222), Quad9 (9.9.9.9), Verisign (64.6.64.6), Comodo (8.26.56.26), GreenTeam (81.218.119.11), SafeDNS (195.46.39.39), Dyn (216.146.35.35), Alternate DNS (198.101.242.72), Yandex.DNS (77.88.8.8), UncensoredDNS (91.239.100.100), Neustar (156.154.70.1), and South Estate (45.77.165.194). The 'DHCP Settings' section shows 'DHCP Server' is ON, 'Network address' is 192.168.178.0, 'DHCP Start address' is 192.168.178.2, 'DHCP End address' is 192.168.178.254, and 'Lease time' is 1h. At the bottom, there are buttons for 'Management', 'Content Sharing', and 'Parental Controls'.

Select a DNS provider from drop down list for IPv4 Primary DNS, IPv4 Secondary DNS, IPv6 Primary DNS and IPv6 Secondary DNS.

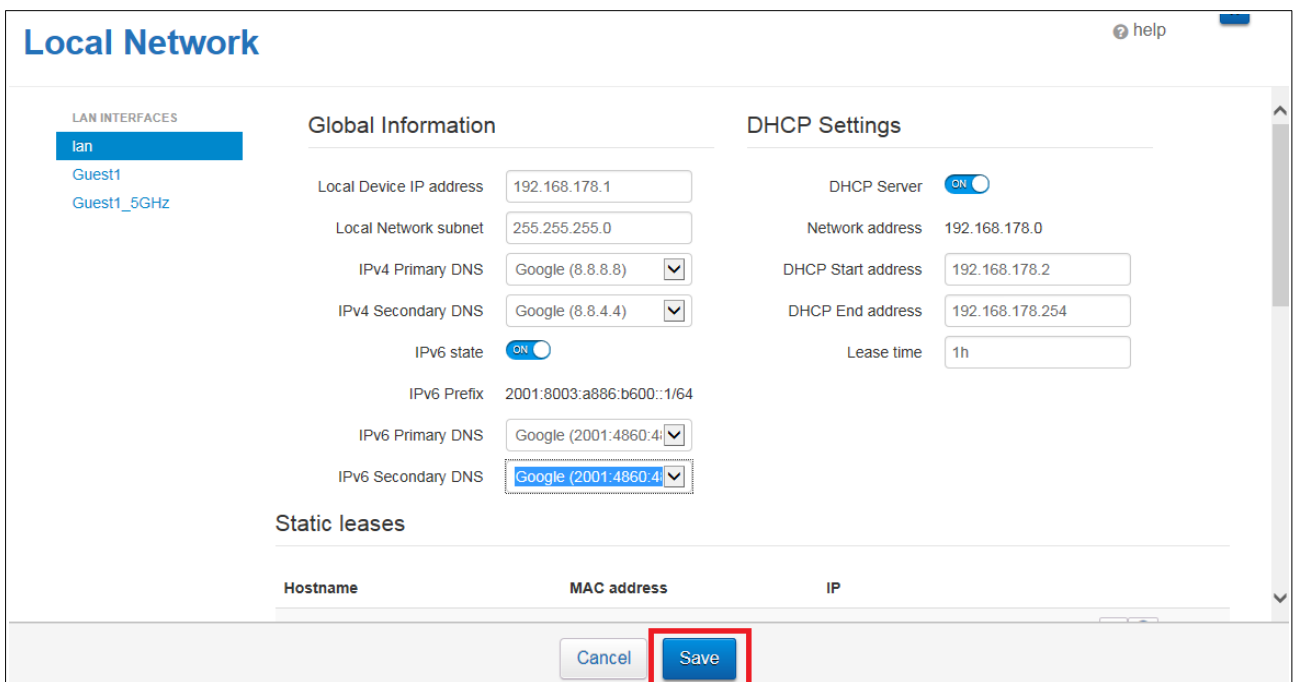

This screenshot shows the 'Local Network' configuration page after the DNS settings have been changed. The 'Global Information' section now shows 'IPv4 Primary DNS' and 'IPv4 Secondary DNS' both set to 'Google (8.8.8.8)' and 'Google (8.8.4.4)' respectively. The 'IPv6 state' is now ON, and the 'IPv6 Prefix' is set to '2001:8003:a886:b600::1/64'. The 'IPv6 Primary DNS' and 'IPv6 Secondary DNS' are both set to 'Google (2001:4860:4::1)' and 'Google (2001:4860:4::2)' respectively. The 'DHCP Settings' section remains the same. At the bottom, the 'Save' button is highlighted with a red rectangle, indicating the next step is to save the changes.

Save Settings and reboot modem or disconnect and then reconnect all devices.

## 33. Telstra Gen 2 WiFi Boosters

To pair a Booster with the modem

Turn Booster on and wait for front light to turn red.


Press pair button on back of modem for 5 seconds. Pair light will flash green at rate of twice per second.

Press pair button on back of booster for 5 seconds. Front light will flash orange and turn blue when connected to modem.


On my first attempt front light flashed blue and purple after flashing orange and then turned red. Had to try a second time.

When Booster is paired there is an extra Booster Status Tab and Wi-Fi Devices tab on the Modem's Home page.

Image below shows modem's home page with WiFi Booster Status tab open.

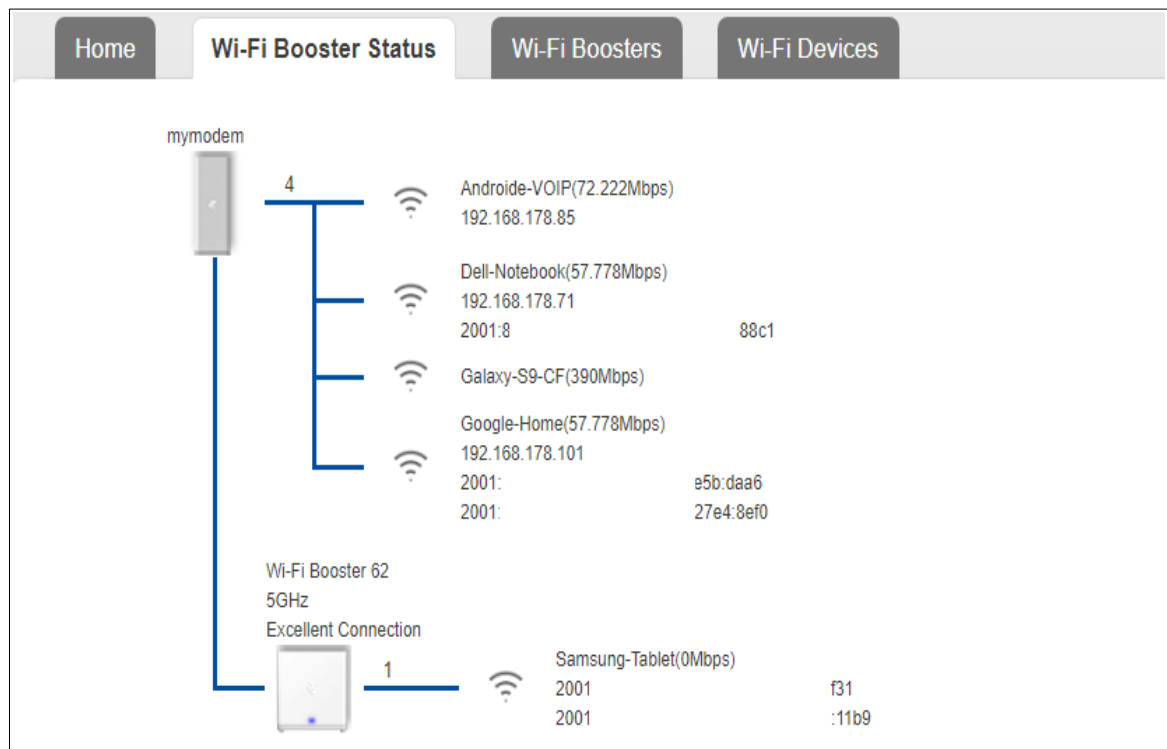

Taping or clicking on the Wi-Fi Booster Icon takes you to this page.

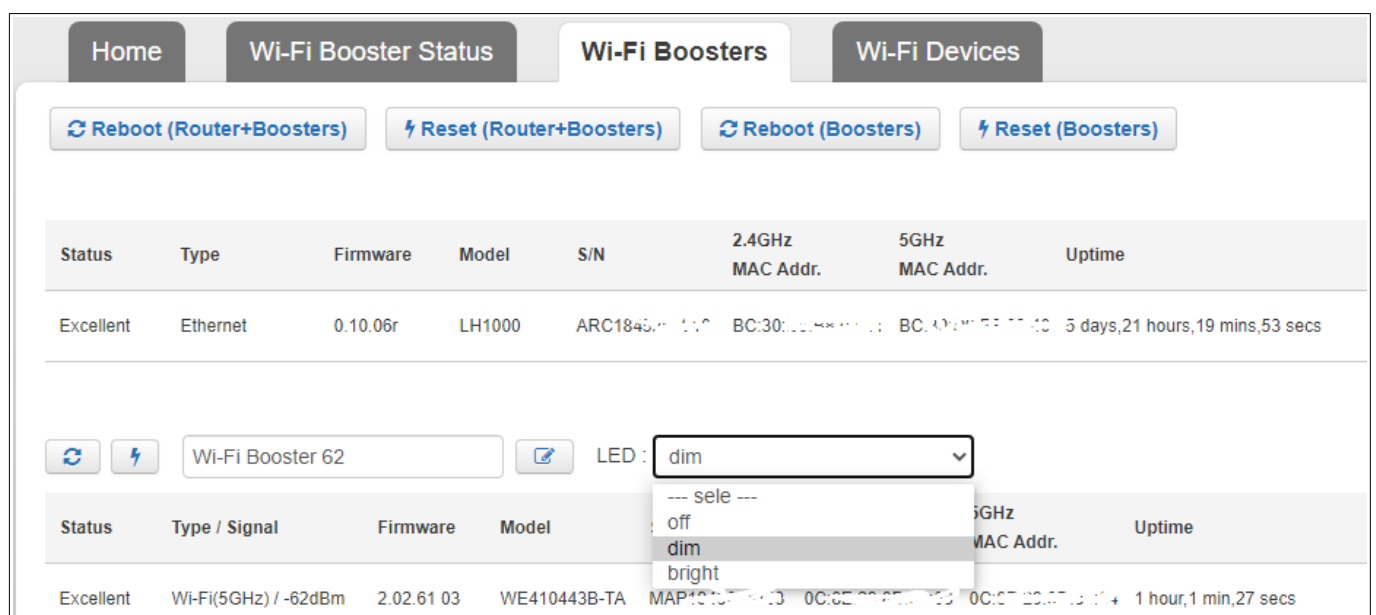


On this Tab you can

1. Reboot both modem and booster at same time.
2. Reset both modem and booster at same time.
3. Reboot booster only.
4. Reset booster only.
5. Control brightness of light on front of booster.

Tapping or clicking on WiFi Devices shows detailed information about connected devices.

| Home    Wi-Fi Booster Status    Wi-Fi Boosters <b>Wi-Fi Devices</b>                                |             |                 |              |               |                 |           |            |  |
|----------------------------------------------------------------------------------------------------|-------------|-----------------|--------------|---------------|-----------------|-----------|------------|--|
| mymodem                                                                                            |             |                 |              |               |                 |           |            |  |
| Connected Devices: 4                                                                               |             |                 |              |               |                 |           |            |  |
| Name                                                                                               | MAC address | IPv4 address    | IPv6 address | Wi-Fi Band    | Signal Strength | Link Rate |            |  |
| Dell-Notebook                                                                                      | 9           | 192.168.178.71  |              | 477:88c1      | 2.4GHz          | -37dBm    | 57.778Mbps |  |
| Androide-VOIP                                                                                      |             | 192.168.178.85  |              |               | 2.4GHz          | -39dBm    | 1Mbps      |  |
| Google-Home                                                                                        | i           | 192.168.178.101 |              | b:daa6e4:8ef0 | 2.4GHz          | -40dBm    | 52Mbps     |  |
| Galaxy-S9-CF                                                                                       |             |                 |              | 93:e355:4026  | 5GHz            | -54dBm    | 6Mbps      |  |
| Wi-Fi Booster 62                                                                                   |             |                 |              |               |                 |           |            |  |
| Connected Devices: 1                                                                               |             |                 |              |               |                 |           |            |  |
| Name                                                                                               | MAC address | IPv4 address    | IPv6 address | Wi-Fi Band    | Signal Strength | Link Rate |            |  |
|  Samsung-Tablet |             |                 |              | wireless      | -57dBm          | 433Mbps   |            |  |

An extra WiFi Graph Tab is also added to the Traffic Monitor page (Services > Traffic Monitor

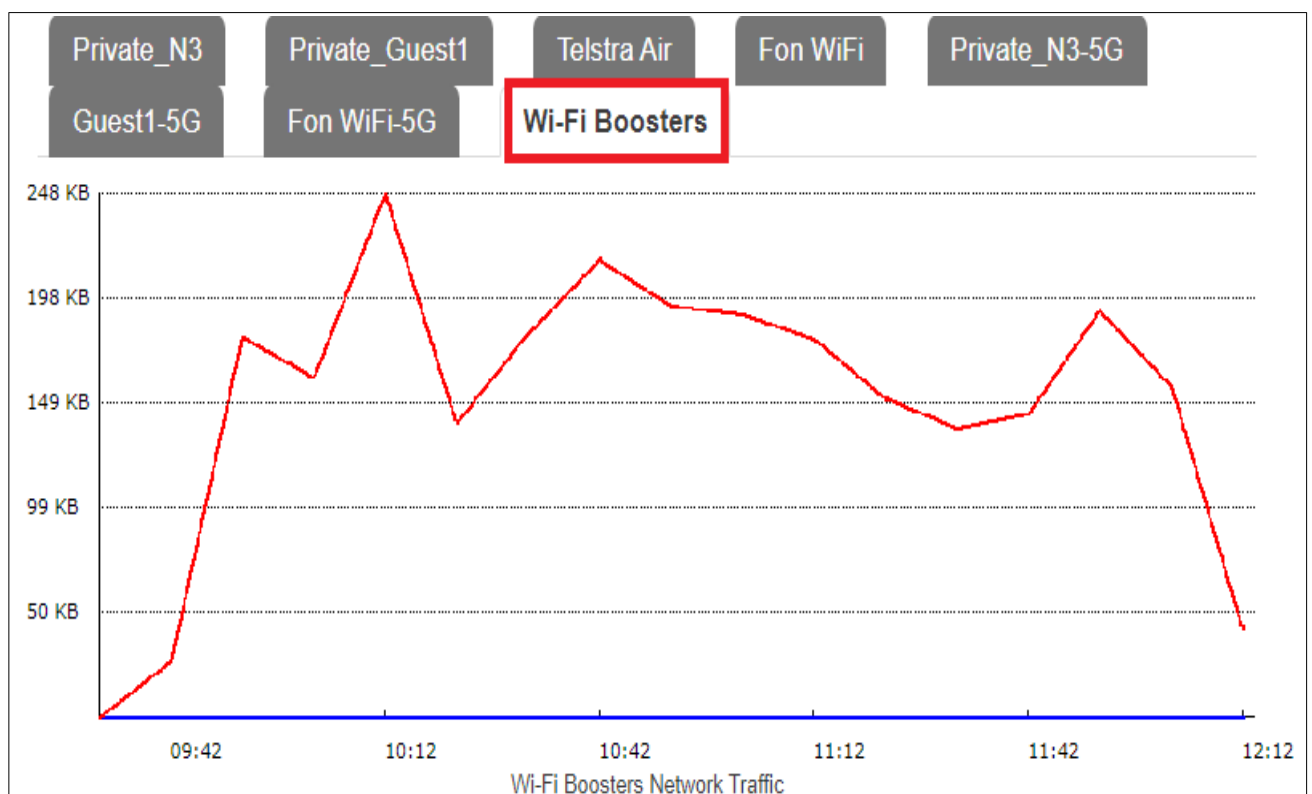

## 34. Modem as Access point

1. Remove SIM card
2. Open a Web browser on device connected to modem and go to <http://192.168.0.1>, password is Telstra and change WiFi SSID and password to match that of main modem. See section 21 for instructions on how to do this.
3. Go to Advanced > Local Network.
4. Turn IPv6 State off.
5. Turn DHCP Server off
6. Change the LAN IPv4 address so that it is within the same subset as main modem but is different to LAN IPv4 address of first modem and IPv4 address of all other devices connected to first modem and save settings. There is a list of all connected devices with their IP address at Go to Advanced > Devices. In the image below my main modem is a Fritz box which has a LAN IP address of 192.168.178.1.

**Local Network** help

**LAN INTERFACES**

- lan
- Guest1
- Guest1\_5GHz

**Global Information**

Local Device IP address: 192.168.178.3

Local Network subnet: 255.255.255.0

IPv4 Primary DNS: Telstra

IPv4 Secondary DNS:

IPv6 state: OFF

IPv6 Primary DNS:

IPv6 Secondary DNS:

**DHCP Settings**

DHCP Server: OFF

Network address: 192.168.0.0

DHCP Start address: 192.168.178.4

DHCP End address: 192.168.178.254

Lease time: 1h


**Static leases**

| Hostname | MAC address | IP |
|----------|-------------|----|
|----------|-------------|----|

+ Add new static lease

Cancel Save

7. Save settings.
8. Connect LAN port of DJA0231 to LAN port of main modem.

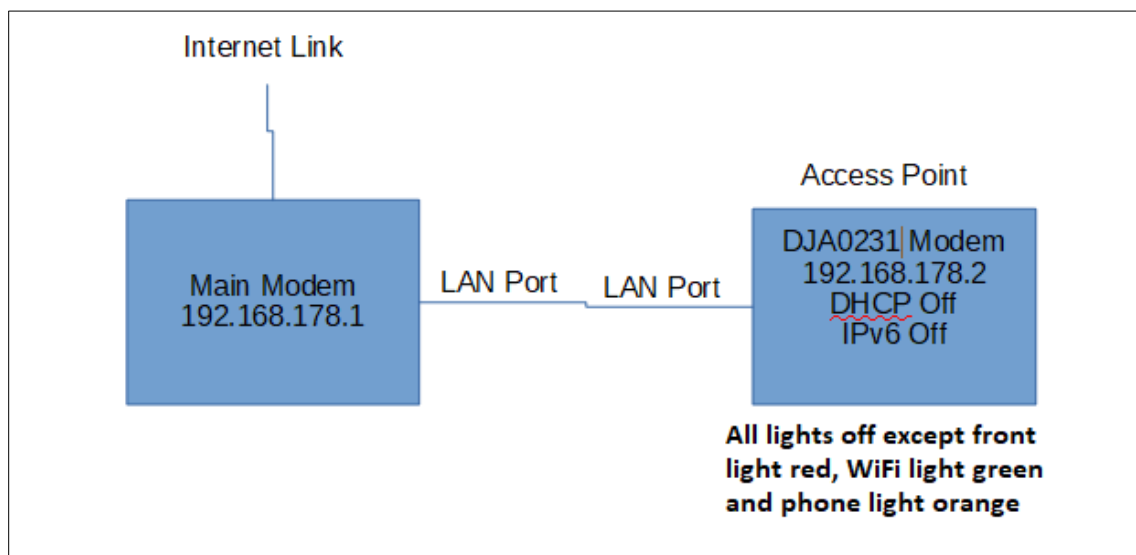

## 35. Enable Guest WiFi

Open a Web browser on device connected to modem and go to <http://192.168.0.1>, password is Telstra.

Go to WiFi.

Select the Guest1 Tab.

Tick Enabled under WiFi Network.

Save settings.

HOME BROADBAND **WI-FI** CONTENT SHARING PARENTAL CONTROL SERVICES USER SETTINGS ADVANCED

2.4GHz 5GHz **Guest1** Guest1\_5G

Wi-Fi Radio

Enabled ☒

Wi-Fi Channel

MAC Address 12:34:56:78:9A:BC

Speed 58.5Mbps

Current Channel 1

Channel Width auto

Wi-Fi Network

Enabled ☒

Network Name Guest1 **WiFi Name (SSID)**

Security Mode WPA2 PSK

Network Key Telstra123456789 **WiFi Password**

Band Steering Enabled ☐

The Band Steering actively guides the client to the most suitable Wi-Fi band, by detecting the client's capabilities and monitoring the interfaces.

Cancel **Save**

Repeat for the Guest1\_5G Tab.

Device on the Guest have Internet access and the data is metered against your account but they are unable to connect to or share resources such as printers connected to main Network

## 36. WiFi Protected Management Frames (PMF)

The WiFi security of the modem was enhanced with the addition of Protected Management Frames in firmware update 18.1.c.512-950-RB. Protected Management Frames (PMF) is a standard defined by WiFi Alliance to enhance WiFi connection safety. It provides unicast and multicast management actions and frames a secure method with WPA2/WPA3, which can improve packet privacy protection. It causes problems with some devices mainly old devices that only support the 2.4 GHz WiFi band. Some of the problems are:

1. Device want connect modem's WiFi common error is wrong password.
2. Devices connect but don't have a valid IPv4 address.
3. Causes windows to crash with blue screen of death when connecting to modems WiFi.
4. Causes some android devices to reboot when WiFi on modem is turned off and then back on.
5. Some devices connect Okay but loose connection intermittently.

If some of your device experience any of the above problems suggest you turn PMF off by logging into modem, go to Advanced > WiFi, scroll down to Protected Management Frames, set to disabled and save settings. If the problem occurs with 5 GHz devices repeat for the 5 GHz WiFi network.

**Wireless**refresh data

WPS AP PIN Enabled☐

WPS AP PIN code10020314

WPS Device PIN code

Set PIN code

Connect using WPS

Trigger

Protected Management Frames

Enabled

Enabled

Disabled

Band Steering Enabled

OFF

Detecting a Wi-Fi client's capabilities and monitoring its interfaces, Band Steering actively guides the client to the more suitable Wi-Fi band.

# 37. Specifications

Integrated LTE Module:

- **Quectel EC-25-AUTL (CAT-4)**
- External SIM slot

Main Chipset:

- BCM63138

Memory

- Non-Service-Affecting Platform Software upgrades (dual bank memory)
- 1GB RAM (DDR3)
- 512 MB Flash (2x256 Dual Bank)

Wireless capability:

- IEEE 802.11n 2.4 GHz using 2x2 BRCM 4360 maximum 26dBm (b11, g54, N450)
- IEEE 802.11ac 5 GHz using 4x4 BRCM 4366 maximum 30dBm (a54, N600, AC 1733)

Ethernet Capability:

- 1xGigabit Ethernet WAN port
- 4x10/100Mbps/1Gigabit LAN ports

USB Master Capability

- x1 USB 3.0 Interfaces (1000mA)
- Hard Disk (FAT32 EXT2)
- NTFS, HFS+ supported
- Maximum Disk Size 2TB
- DLNA and SMBA 1.0
- USB HUB

ADSL, ADSL2, ADSL2+ compliance:

- (Maximum Rate: 24 Mbps for downstream and 3 Mbps upstream)

VDSL2 compliance

- ITU G.993.2
- SOS
- SRA
- INM
- Up to 17 MHz profiles (POTS)
- ITU-T G.993.5 (G.vector)
- ITU-T G.998.4 (G.inp)
- G.Fast g.9700, g.9701

DECT

- CAT-iq™ 2.0 certification
- Up to 5 paired DECT handsets
- Up to 4 simultaneous DECT communication links

Voice

- 1 FXS ports with PSTN pass-through when operating in analogue voice mode
- 1 FXO port for PSTN requires external filter
- FXS 3 REN Equivalence

Temperature:

- 0° - 45° C (32 - 113 F) & Humidity: 20% to 80%

Power:

- Power consumption 12.9 Watts with no drive attached to USB port.
- Power factor 0.48
- Volt Amps VA 26

## 38. Known Limitations and Bugs.

1. DLNA server does not sort media by folders
2. Does not support FTP access to USB drives.
3. No settings in modem for VPN.
4. UPNP does not work on all devices. Have to set port forwarding manually.
5. 4G backup mode only works on 4G not 3G, speed limited to 6 Mbps down 1 Mbps up
6. When viewing Telephony information (Advance > Telephony > Information) Refresh button doesn't work
7. "Stop Trace Route" does not stop a trace route test.  
(Advanced > Diagnostics > Ping & Trace Route)
8. Link Diagnostics (xDSL) last 15 minute FEC errors and Link Retrain counts are a duplicate of previous days FEC errors.
9. WPS AP pin does not work. Can connect using WPS without having to enter pin when WPS pin is enabled in GUI.
10. WPS Device Pin can only enter 4 digits.
11. Devices connected to modem via switch or WiFi extender are grouped together with same MAC address. Have to enter MAC address manually if setting up static leases and if setting up port forwarding can't use Advanced > WAN Services > Port Forwarding. Not all switches and extenders have this problem.
12. If Parental controls are used to block a secure site following message is displayed when you navigate to blocked site "Secure Connection Failed" or "Cannot securely connect to this page" instead of "Destination is Blocked due to Parental Controls"
13. Event Log resets on each reboot.
14. Internet Traffic graph on DSL links is fault. Starts at zero 10 minutes before graph is viewed and rises to the total data received or transmitted since modem was rebooted.
15. Remote Web access resets at each reboot. Locks up and requires modem reboot if modem switches to 4G and then back to main link.
16. DECT base has problems with some DECT handset.
  - Intercom between handset doesn't work.
  - Handsets lose contact with base.
  - Outgoing call recorded on handset as two incoming calls.